



OWNER'S MANUAL

RADIANT-DISH HEATER



MODEL 2PHCF14C

TECHNICAL DATA

Model: 2PHCF14C

Voltage: 120V~ / 60Hz

Amps: Maximum continuous draw: 6.67 Amps

Watts: 400 / 800W

CONSUMER PRODUCT INFORMATION

For your own records, please attach a copy of your sales receipt to this manual. Also, write the store name/location and date purchased below:

Store Name: _____

Location: _____

Date Purchased: _____

CONTENTS

Safety Guidelines	4-5
Safety Features.....	6
Product Diagram	7
Instructions for Use	8
Care and Maintenance	10
Troubleshooting	11

IMPORTANT NOTE:

Read the manual carefully. Make sure to save this manual for future reference. Illustrations in this manual are for explanatory purposes only, your actual product may look slightly different.

SAFETY GUIDELINES

WARNING: Read and understand this entire owner's manual, including all safety information, before electric shock, or serious personal injury.

READ AND SAVE THESE INSTRUCTIONS

IMPORTANT INSTRUCTIONS

When using this electric unit, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read ALL instructions before using this unit.
2. CAUTION: Risk of Electric Shock. DO NOT open or try to repair the heater yourself.
3. This heater may get hot when in use. To avoid burns, DO NOT let bare skin touch hot surfaces. If provided, use handle(s) when moving this heater. DO NOT place it against walls, furniture, curtains, etc.
4. Keep combustible materials, such as furniture, pillows, bedding, paper, clothes, and curtains at least 3 ft from the front of the heater and keep them away from the sides, top, and rear. DO NOT place towels or other objects on the heater.
5. Extreme caution is necessary when any heater is used.
6. DO NOT operate any heater with a damaged cord or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
7. This heater is not intended for use in bathrooms, laundry areas, showers or swimming pools and similar locations. NEVER locate heater where it may fall into a bathtub or other water container. To protect against electrical hazards, DO NOT immerse in water or other liquids.
8. DO NOT touch the control panel or plug with a wet hand.
9. DO NOT run cord under carpeting. DO NOT cover cord with throw rugs, runners, or similar coverings. Arrange cord away from traffic area and where it will not be tripped over.
10. DO NOT insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.

11. To prevent a possible fire, DO NOT block the air intakes or exhaust in any manner. DO NOT use on soft surfaces, like a bed, where openings may become blocked.
12. A heater has hot and arcing or sparking parts inside. DO NOT use in areas where gasoline, paint, explosive and/or flammable liquids are used or stored. Keep unit away from heated surfaces and open flames.
13. Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip). Never share this heater's wall outlet with another appliance.
14. To avoid fire or shock hazard, plug the unit directly into a 120 V AC electrical outlet.
15. To disconnect heater, turn controls to OFF, then remove plug from outlet. Pull firmly on the plug, DO NOT unplug by pulling on the cord.
16. Always unplug the unit before moving or cleaning, or whenever the heater is not in use.
17. Use only for intended household use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons. The use of attachments not recommended or sold by unauthorized dealers may cause hazards.
18. Always use on a dry, level surface. Use on floor only.
19. DO NOT use outdoors.
20. **WARNING:** To reduce the risk of fire or electric shock, DO NOT use this unit with any solid-state speed control device.
21. DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts.
22. Always use the product in an upright position.

SAFETY FEATURES

TIP-OVER SAFETY FEATURE

This heater is equipped with a tip-over safety feature. Once the heater is tipped over, an internal switch will automatically shut the heater off. Once the heater is restored an upright position, the heater will reset. To continue operation, turn on the heater the control panel on the heater.

OVERHEAT SAFETY FEATURE

This heater is equipped with an overheat safety feature. When the heater's internal components reach a certain temperature that could cause overheating and possible fire, the heater will automatically shut off.

- A thermal overload protector is built in to prevent overheating. When an "overheat" temperature is reached, the heater will automatically shut off. Operation can resume only when the user resets the unit.
- To reset the unit, unplug the heater, ensure the power is turned off, and wait 15 to 20 minutes for the unit to cool down.
- Follow INSTRUCTIONS FOR USE to return heater to operating mode.


WARNING: It is normal for the power cord to feel warm to the touch; however, a loose fit between the outlet and the plug may cause overheating of the plug. If this occurs, try inserting the plug into a different outlet. Contact a qualified electrician to inspect the original outlet for damage.

THIS APPLIANCE HAS A POLARIZED

PLUG (one blade is wider than the other).

To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug.

If it still does not fit, contact a qualified electrician to install the proper outlet.

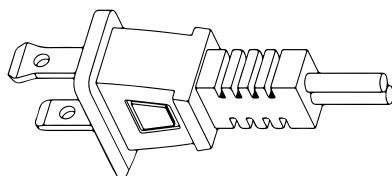

DO NOT ATTEMPT TO MODIFY THIS PLUG OR DEFEAT THIS SAFETY FEATURE IN ANY WAY.


ALWAYS ENSURE THAT THE OUTLET YOU ARE USING TO SUPPLY POWER HAS BEEN PROPERLY GROUNDED BY A CERTIFIED ELECTRICIAN.

PRODUCT DIAGRAM

IN THE BOX

- Dish Heater
- Owner's Manual

PRODUCT DIAGRAM

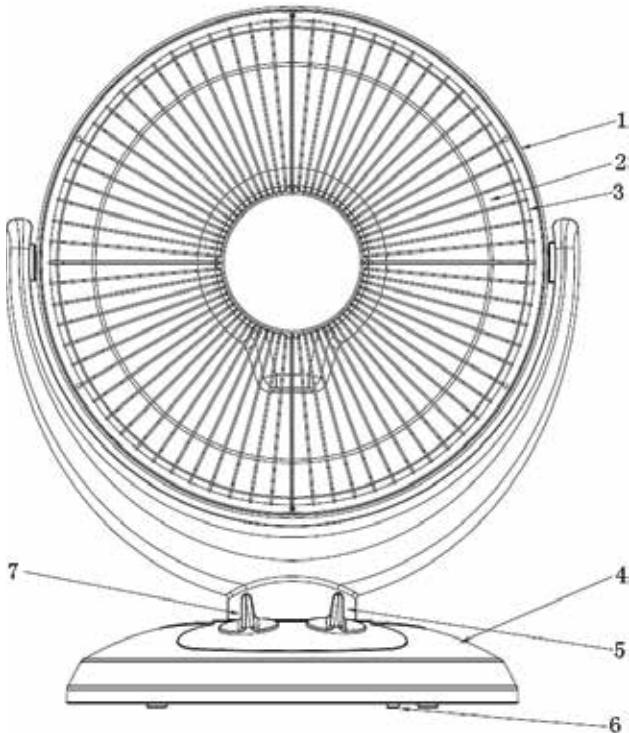


1. Built-in Carrying Handle (in back)	5. Timer Knob
2. Protective Front Grille	6. Tip-over Safety Switch (on bottom)
3. Parabolic Reflection Hood	7. Power Knob
4. Base	

INSTRUCTIONS FOR USE

CONTROL PANEL

1. Power Off
2. OSC & Low heat setting
3. OSC & High heat setting
4. Low heat setting
5. High heat setting
6. Timer knob
7. Timer Off
8. Timer normal open

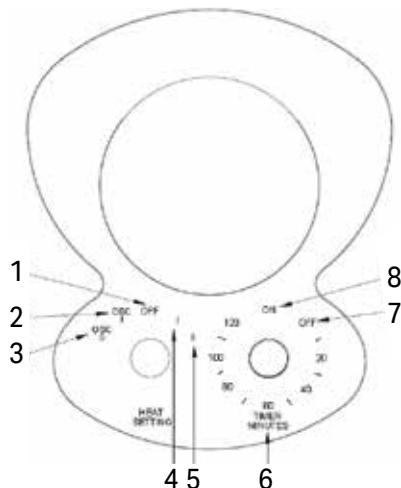

OPERATION

NOTICE: The heater should always be plugged directly into a wall outlet. Never share this heater's wall outlet with another appliance. Never use an extension cord, power strip, any other type of outlet adapter or improper outlet/power plug modification with this product, as it can be hazardous and will void the warranty.

Turn the power knob to the desired heat setting. (Timer must be set in ON position). LOW: heating up to 400W | HIGH: heating up to 800W
OSC. LOW: heater will rotate left to right, and heat up to 400W
OSC. HIGH: heater will rotate left to right, and heat up to 800W
OFF: heater will stop operating

NOTE: Do not manually rotate heater. It should only be rotated using oscillation function.

CARE AND MAINTENANCE

TIMER

To operate the timer, turn the timer knob clock-wise to the desired position. The value will vary from 0 to 2 hr (10 minutes interval) in circulation. The heater will stop automatically after the set timer is reached.

NOTE: Setting the timer is not an excuse to leave the heater unattended.

VERTICAL TILT

CAUTION When tilting the adjustment head, the heater must be turned off.

To tilt the adjustable head, pull the reflection hood and gently tilt it forward or backwards until you hear a click. The reflection hood can be tilt into 4 positions.

CARE AND MAINTENANCE

1. Turn the POWER KNOB to 0 (OFF) position.
2. Unplug the unit and let it cool completely.
3. You may use a vacuum with a brush adapter or a lintless cloth to gently clean the front grill.
4. The outer shell may be cleaned with a soft, damp cloth (water only).
5. After cleaning, dry the unit with a soft cloth.
6. Wait until the unit is completely dry before use.

WARNING

- DO NOT allow water to enter the heater.
- DO NOT use alcohol, gasoline, abrasive powders, furniture polish, or rough brushes to clean the heater. This may cause damage or deterioration to the surface of the heater.
- DO NOT immerse the heater in water.

STORAGE

Store the heater in a cool, dry location when not in use. To prevent dust and dirt build-up, use the original packaging to repack the unit.


TROUBLESHOOTING

If the heater will not operate, please check the following:

1. Check if the power cord is plugged into an electrical outlet. If not, plug in unit to appropriate outlet.
2. Check if electricity to the outlet is working.
3. Ensure power is turned to ON position.
4. Make sure heater is placed on a solid surface.
5. See SAFETY FEATURES section for additional information.
6. Turn the THERMOSTAT KNOB clockwise. The heater only works when the set temperature is higher than room temperature.

NOTICE: The product is equipped with an overheat safety feature protector which will switch off the heater in case of accidental over heating (ex. Obstruction of air intake and outlet grills, motor turning slowly or not at all).

NOTICE: The product is equipped with tip-over switch inside. When the product tips over abnormally during its use, it can cut off power automatically.

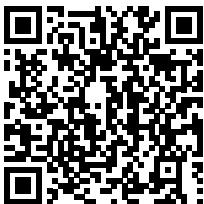

SCAN CODE TO
LEAVE A REVIEW

THANK YOU FOR YOUR PURCHASE!

We'd love to hear how you are enjoying your Perfect Aire product! Please take a minute to tell us (and others) about your experience.

Thanks (again!)



5401 Dansher Road
Countryside, IL 60525

844-4PA-AIRE | 844-472-2473 | support@perfectaire.us

CANADA SUPPORT 877-997-2473 | supportcanada@perfectaire.us

www.perfectaire.us