


**ULINE** H-11441, H-11442


**KEURIG® K1550™**  
**COMMERCIAL BREWER**

1-800-295-5510  
uline.com

Para Español, vea páginas 9-16.  
Pour le français, consulter les pages 17-24.

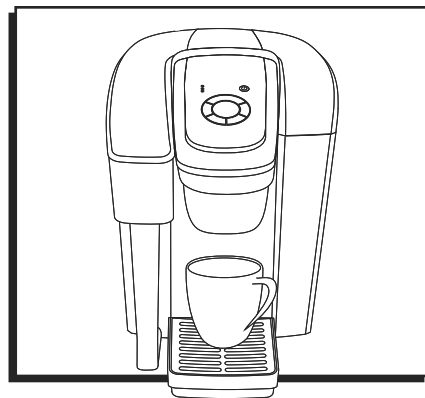

## PARTS

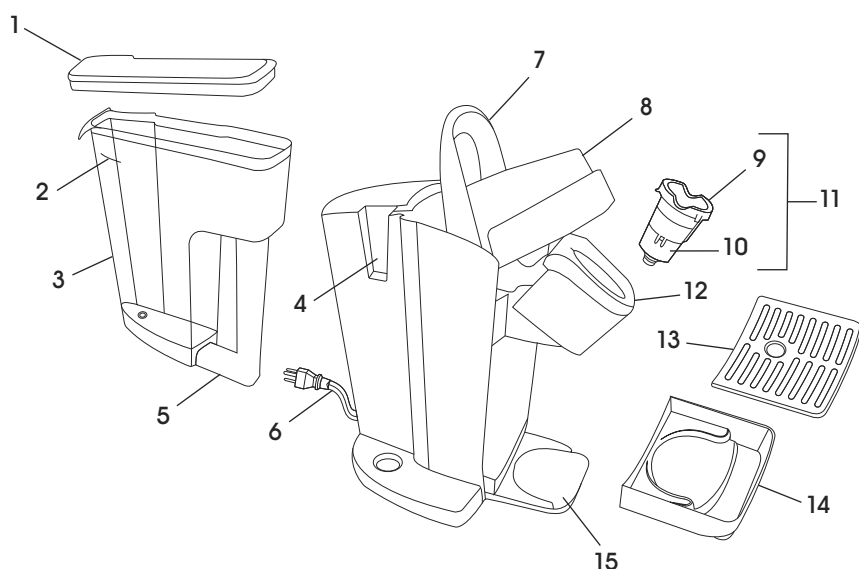

### PARTS


#	DESCRIPTION
1	Water Reservoir Lid
2	Max Fill Line
3	Water Reservoir
4	Water Reservoir Lock Tab Slot
5	Water Reservoir Handle
6	Power Cord
7	Ball
8	Lid
9	K-Cup® Pod Holder
10	Funnel
11	K-Cup® Pod Holder Assembly
12	K-Cup® Pod Assembly Housing
13	Drip Tray Plate
14	Drip Tray
15	Drip Tray Base

## INSTRUCTIONS

### BEFORE BREWING


1. Remove packing tape from brewer and plug into a grounded outlet. Place a large mug (12 oz. minimum) on the drip tray plate. (See Figure 1)

Figure 1

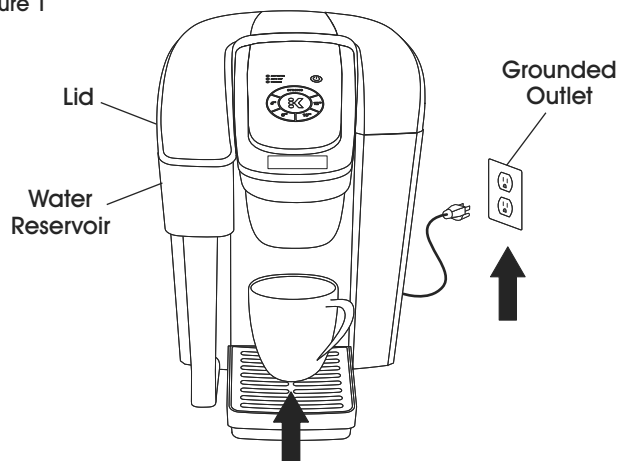


## INSTRUCTIONS CONTINUED


- Remove the water reservoir lid, then lift the reservoir straight up to remove it. (See Figure 2)

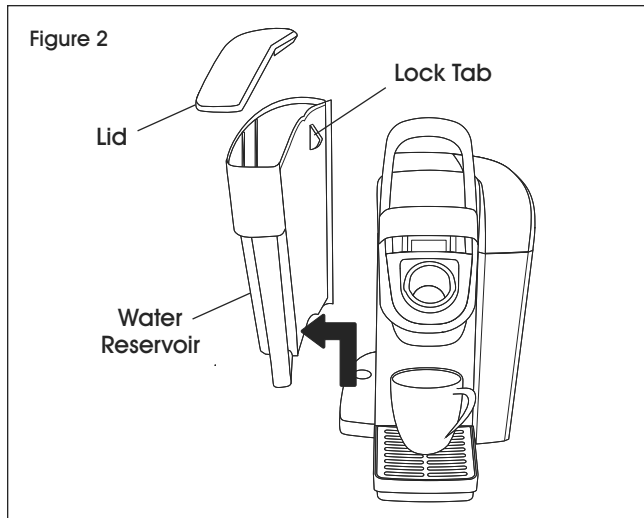


- Rinse reservoir with fresh water and fill to the Max fill line. (See Figure 3)

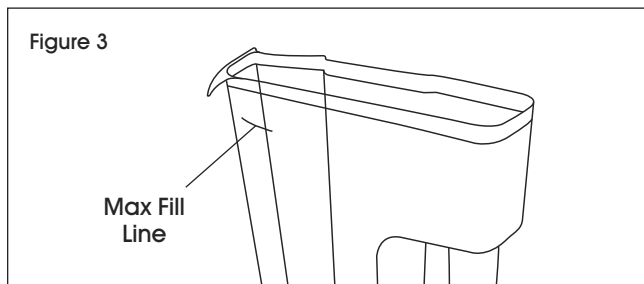


- Replace water reservoir, ensuring the lock tab engages with the brewer. Replace lid.
- Lift and lower the bale handle to power on. The white power light will illuminate. (See Figure 4)

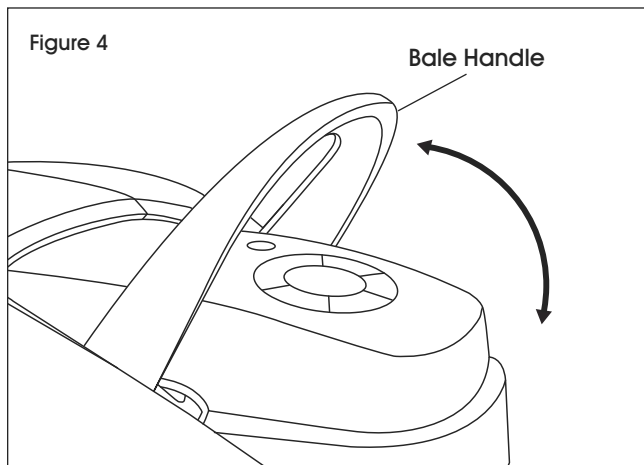

- The brewer will automatically begin heating the water. This will take about three minutes. Once the heating sound stops, the brewer is ready.

 **NOTE:** Do not insert a K-Cup® pod. Open and close the bail. The brew size and **STRONG** buttons will blink. (See Figure 5)

- Press the 8 oz. button and then the **BREW** button to start a cleansing brew. Pour the hot water into the sink. (See Figure 5)

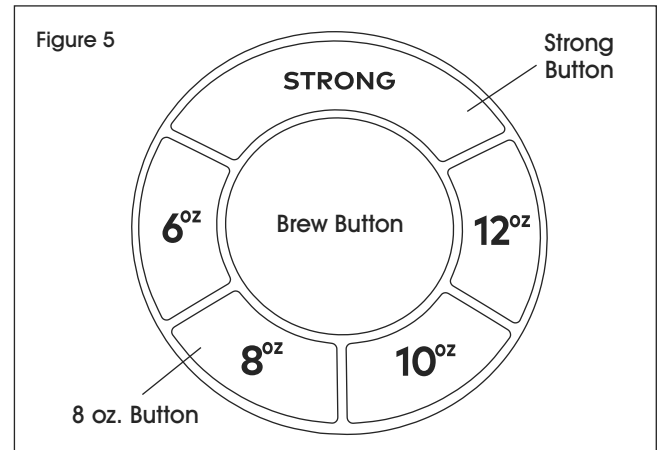


## BREWING

- Ensure mug is on the drip tray plate. If using a travel mug, remove the drip tray and place the mug on the drip tray base.


 **NOTE:** Between brew cycles, the brewer may take about a minute to reheat.

- Lift the handle and place a K-Cup® pod in the K-Cup® pod holder. Lower the handle completely to close the lid. Do not remove the foil lid on the K-Cup® pod. (See Figure 6)

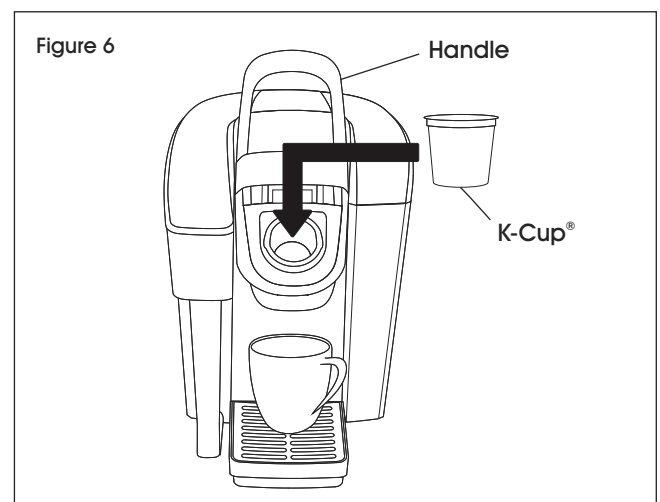

## INSTRUCTIONS CONTINUED

3. Select brew size – for bolder coffee, press the **STRONG** button first. After selecting a brew size, the **BREW** button will flash. Press the **BREW** button to begin brewing your beverage. The brew size, **BREW** button, and **STRONG** button, if selected, will remain illuminated while brewing – about one minute. The brewer will be ready to brew another cup in about a minute. (See Figure 7)

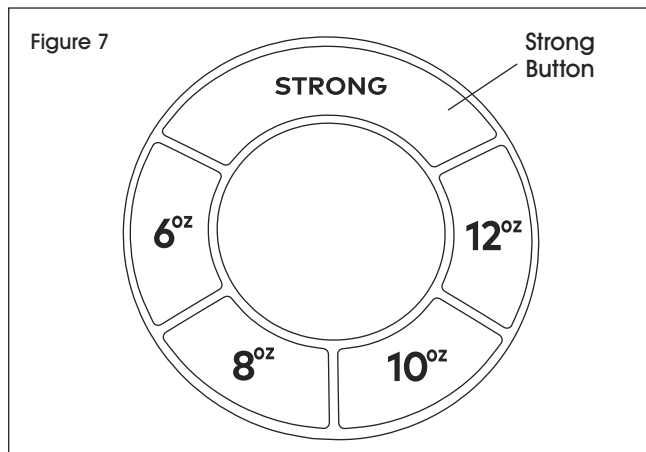

**CAUTION!** While brewing, there is extremely hot water in the K-Cup® pod holder. To avoid injury, do not lift the handle during the brewing


### BREW OVER ICE

- a. Fill a 16 oz. tumbler with ice.
- b. Press the **BREW** button to begin brewing.



**NOTE:** Do not brew hot over ice into a glass cup.

- c. Brews 6 oz. of hot beverage at extra strong setting to hold up to the ice.

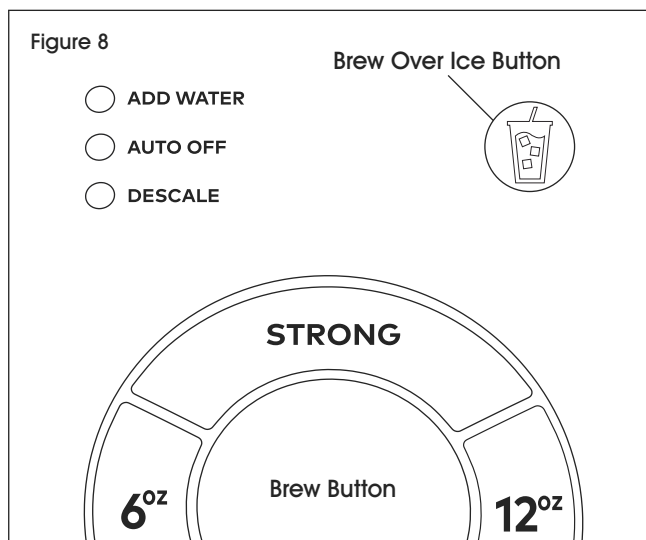

## HIGH ALTITUDE BREWING

### ENABLE HIGH ALTITUDE BREWING

1. Power the brewer off while it is plugged in.
2. Press and hold the **STRONG** and 8 oz. buttons for three seconds. Both lights will blink three times to confirm that the High Altitude Brewing Mode has been enabled.
3. While holding the brewer bail up, push down slowly on the K-Cup® pod in the pod holder until the bottom of the K-Cup® pod is punctured by the exit needle.

### DISABLE HIGH ALTITUDE BREWING

1. Power the brewer off while it is plugged in.
2. Press and hold the **STRONG** and 8 oz. buttons until the lights are no longer illuminated.

## BREWER FEATURES

### STRONG BREW

Strong Brew increases the strength and bold taste of your coffee's flavor. For bolder coffee, press the **STRONG** button and select a brew size.

### SMART START

Smart Start heats then brews in one simple process. Power on the brewer, place mug, insert a K-Cup® pod and lower the bail. Then, select a brew size and press the **BREW** button. The brewer will heat, then automatically begin brewing.

### AUTO OFF

Auto Off automatically turns the brewer off two hours after the last brew for energy savings. To disable, power the brewer off while it is still plugged in. Press down on the **STRONG** and 10 oz. buttons at the same time and hold for three seconds until the AUTO OFF indicator is turned off. Repeat the same steps to enable the feature.

## MAINTENANCE



**NOTE:** Ensure the brewer is turned off and unplugged before cleaning.

### BREWER EXTERIOR

Clean the exterior with a damp, soapy, lint-free, non-abrasive cloth. Never immerse the brewer in water or other liquids.

### DRIP TRAY

The drip tray can accumulate up to eight ounces of overflow and should be emptied and cleaned occasionally. To remove tray, slide it toward you, keeping it level to avoid spilling. Clean with a damp, soapy, lint-free, non-abrasive cloth.

### WATER RESERVOIR AND RESERVOIR LID


The water reservoir and water reservoir lid should be periodically cleaned with a damp, soapy, non-abrasive cloth and rinsed thoroughly. The water reservoir lid and water reservoir should not be put into the dishwasher. Do not dry the inside of the water reservoir with a cloth, as lint may remain.

To clean the filter screen at the base of the water reservoir, empty the water reservoir and follow one or all of the following procedures:



**NOTE:** If using a water filter inside the water reservoir, remove it before cleaning.

1. Remove the water reservoir lid, then lift the reservoir straight up to remove it. (See Figure 9)

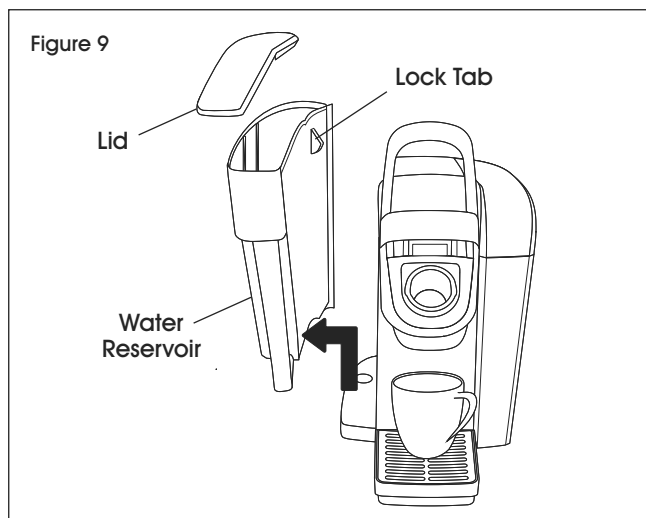

2. Fill the water reservoir with approximately 2" of clean water and agitate (shake) the water reservoir.
3. Empty the water reservoir, fill with clean water and return it to the brewer. If needed, repeat above procedures.



**CAUTION!** Rinse the water reservoir thoroughly after cleaning. This ensures that no cleaners or cleaning solutions remain in this area, as they may contaminate the water supply in the brewer.


### K-CUP® POD HOLDER ASSEMBLY

To remove the K-Cup® pod holder from the brewer, lift the handle and grasp the top of the K-Cup® pod holder with one hand while pushing up on the bottom of the K-Cup® pod holder from underneath with the other until it releases. To reinstall, align the K-Cup® pod holder with the opening using the two front ribs as a guide and snap into place from the top. (See Figure 10)




**CAUTION!** There are sharp needles that puncture the K-Cup® pod above the K-Cup® pod holder and in the bottom of the K-Cup® pod holder. To avoid risk of injury, do not put your fingers in the K-Cup® pod holder.

Figure 10

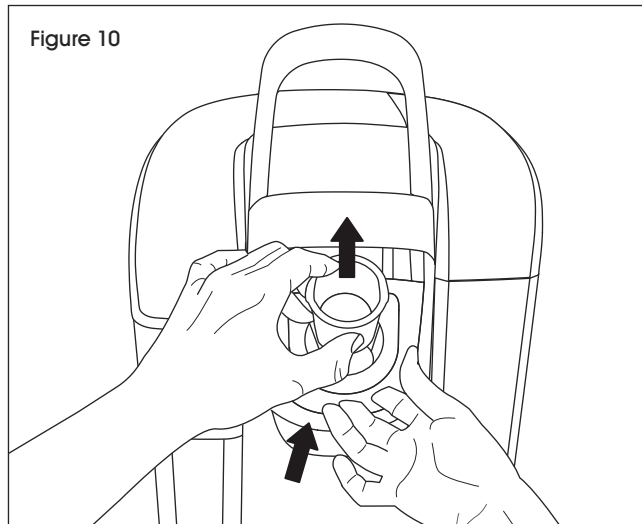

## FUNNEL


The funnel can be removed from the K-Cup® pod holder by pulling on it until it pops off. To replace it, orient the snaps to the indent and snap back onto the K-Cup® pod holder. (See Figure 11)

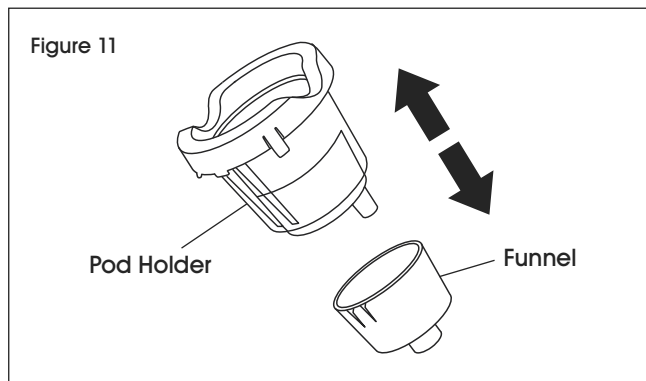

## NEEDLE CARE

### EXIT NEEDLE


Remove the pod holder assembly and detach the funnel. Locate the exit needle on the inside bottom of the K-Cup® pod holder. Insert a straightened paper clip into the exit needle to loosen the clog and push it out. (See Figure 12)

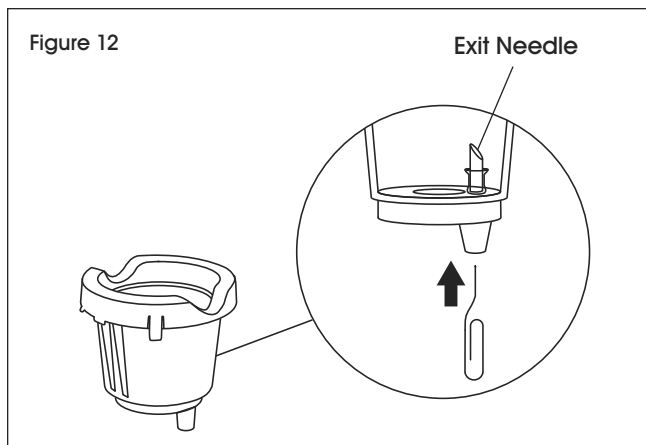

### ENTRANCE NEEDLE


Lift the brewer +/- handle and locate the entrance needle on the underside of the brewer head. To clean all three holes in the needle, hold the brewer handle in the upward position and with your other hand, carefully insert a straightened paper clip into all three holes. Gently move it around to loosen any coffee grounds. Lower the handle completely and run two water-only brew cycles. (See Figure 13)

 **NOTE:** Do not insert a K-Cup® pod.

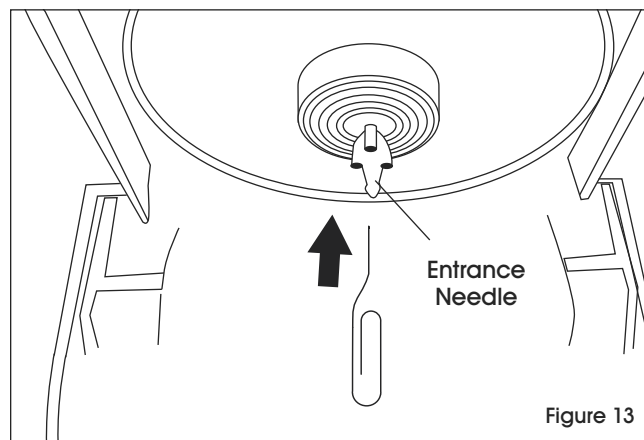

## DESCALING THE BREWER

 **NOTE:** It is recommended to descale brewer every three to six months, or after 500 brew cycles.

 **NOTE:** Before beginning, you will need a large ceramic mug, fresh water, Keurig® Descaling Solution and access to a sink. Do not use a paper cup. Ensure that no beverage pod is in the K-Cup® pod holder. Disable the Auto Off feature on the brewer. Allow approximately 35 minutes for the descaling procedure. Empty the water from the water reservoir. If using a Keurig® water filter, remove and set aside.

### DESCALING SOLUTION RINSE

1. Press the **POWER** button to power the brewer off.
2. Pour the entire bottle of Keurig® Descaling Solution into an emptied water reservoir. Then fill the empty bottle with water and pour into the water reservoir. Press the **POWER** button to turn the brewer back on.
3. Place a large mug on the drip tray and run a rinsing brew by selecting the largest brew size.


## MAINTENANCE CONTINUED

### DESCALING RINSE AND REPEAT

1. Repeat the rinsing brew process until the ADD WATER light is illuminated. Do not use a K-Cup® pod. Let brewer stand for at least 30 minutes while still on.
2. After 30 minutes, discard any residual solution from the water reservoir and rinse thoroughly.


### FRESH WATER RINSE

1. Fill the water reservoir with fresh water to and not beyond the Max fill line.
2. Place a large mug on the drip tray plate and run a rinsing brew using the largest brew size. Do not use a K-Cup® pod. Pour the contents of the mug into the sink.
3. Repeat brew process until you have completed at least 12 rinsing brews using the largest brew size. You may need to refill the water reservoir at least one time during this process.


 **NOTE:** The cleaning action of Keurig® Descaling Solution may result in a "foam" dispensed from the brewer. This is natural, as the solution is reacting with the scale inside. For a brewer that is heavily scaled, the brewer may not fill properly after the descaler is added. If this occurs, you may see only a small or no output dispensed, followed by the sound of air blowing out. If this occurs, turn off and unplug the brewer.

 **NOTE:** If Keurig® Descaling Solution is in the water reservoir, discard the contents, rinse the water reservoir thoroughly and refill with water.

4. Plug the brewer back in, power on, and repeat step 3 of the Fresh Water Rinse cycle. The brewer should begin to function normally as the solution is rinsed out and the scale is removed.


 **NOTE:** If problem persists, allow brewer to sit unplugged for at least 30 minutes before continuing with the rinse.

### DRAINING THE BREWER


 **NOTE:** The hot water tank of these brewers can be completely drained. It is recommended that the brewer be drained before transporting or storing for an extended time.

1. Turn off the brewer, unplug it, and allow the brewer to cool approximately 90 minutes.

2. Remove and empty the water reservoir.
3. Turn the brewer around so the back is facing a sink or an area where the water will be drained.
4. Remove the door on the back of the brewer by pressing down on the door clip. (See Figure 14)

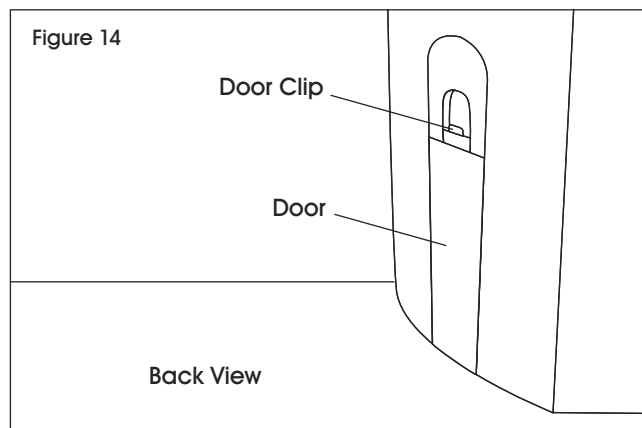

5. Remove the drain tube from within the compartment and carefully remove the plug from the end of the tube while pinching the tubing and pointing it towards the sink or larger pitcher (18 oz. or larger). (See Figure 15)

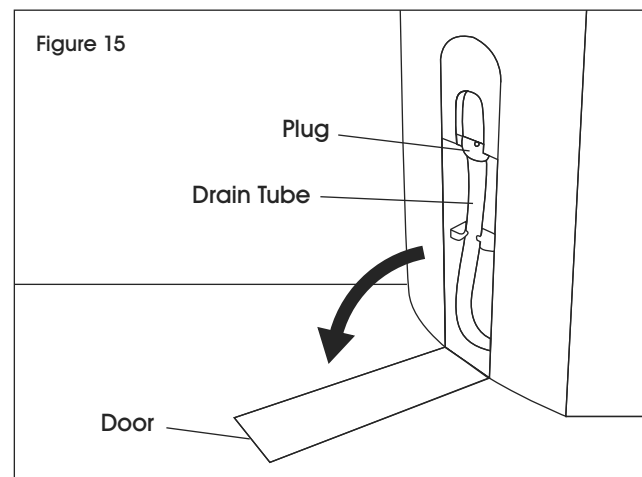

6. Drain the water from the internal hot water tank into the sink or pitcher.



**CAUTION!** If the brewer was not allowed to cool sufficiently, the water draining from the tube may be very hot.

7. Re-cap the tube.



**NOTE:** To avoid losing parts, when finished, re-insert the tube and close the panel door.

## TROUBLESHOOTING

OPERATING ISSUE	CAUSES	RECOMMENDATIONS
Grounds in coffee.	Grounds may have gathered in the exit or entrance needle and can be cleaned using a straightened paper clip or similar tool.	<p>Clean the exit needle of the K-Cup® pod holder. Refer to the exit needle care instructions on page 5.</p> <p>Clean the brewer entrance needle. Refer to the entrance needle care instructions on page 5.</p>
Brewer will not brew.	<p>Handle is not pushed down securely.</p> <p>Water needs to be added to the reservoir.</p> <p>The 6, 8, 10, 12 oz. and <b>STRONG</b> button lights are all on simultaneously.</p> <p>The 6, 8, 10, 12 oz. lights all blink simultaneously.</p>	<p>After placing the K-Cup® pod in the K-Cup® pod holder, ensure that the handle is pushed down securely and the brew buttons are flashing.</p> <p>If the add water light is illuminated, add water to water reservoir. Fill to and not beyond the Max fill line. Ensure the water reservoir is seated properly in its base. If the add water light continues to be illuminated even after refilling, contact Uline Customer Service at 1-800-295-5510.</p> <p>Lift handle and remove K-Cup® pod (if present in the brewer). Close handle and place a large mug on the drip tray. Press the <b>POWER</b> button once. The brewer may dispense hot water.</p> <p>Contact Uline Customer Service at 1-800-295-5510.</p>
Brewing as partial cup.	<p>The exit needle may be clogged.</p> <p>The water reservoir may have been removed during brewing.</p> <p>The brewer may need to be descaled.</p>	<p>Refer to the exit needle care instructions on page 5.</p> <p>Replace the water reservoir and perform a rinsing brew without a K-Cup® pod.</p> <p>If you have repeated the descale procedure on the brewer two times and it is still only brewing a partial cup, contact Uline Customer Service at 1-800-295-5510.</p>

## TROUBLESHOOTING CONTINUED

OPERATING ISSUE	CAUSES	RECOMMENDATIONS
Brewer does not have power or shuts off.	<p><b>POWER</b> button has not been turned on.</p> <p>The electric circuit is overloaded.</p> <p>For energy savings, the factory sets the brewer to turn off automatically after two hours of idle time.</p>	<p>Turn <b>POWER</b> button on.</p> <p>Plug brewer into its own grounded outlet. If the electric circuit is overloaded with other appliances, the brewer may not function properly. The brewer should be operated on its own circuit, separate from other appliances.</p> <p>Disable this feature by pressing down on the <b>STRONG</b> and <b>10 oz.</b> buttons at the same time and holding until the LEDs flash. The AUTO OFF indicator should then turn off. Repeat the same steps to enable the feature. Press the <b>POWER</b> button, and the green power light will illuminate.</p> <p>If the brewer still does not have power, contact Uline Customer Service at 1-800-295-5510.</p>

**ULINE**

1-800-295-5510  
uline.com