 


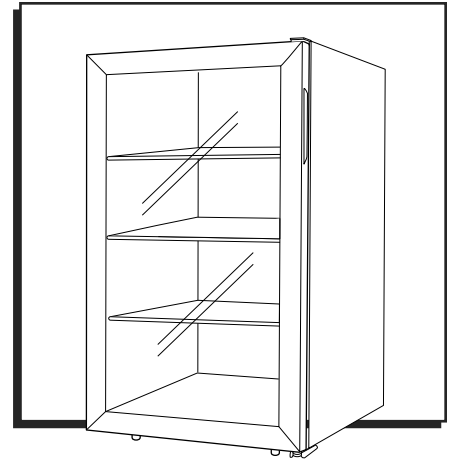

Two Person Assembly
Required



SAFETY

Read, save and follow all safety instructions.



DANGER! Risk of fire or explosion. Flammable refrigerant used. Do not puncture refrigerant tubing.

- Do not use mechanical devices to defrost refrigerator.
- Ensure that servicing is done by factory authorized service personnel, to minimize product damage or safety issues.
- If the power supply cord is damaged, it must be replaced by the manufacturer, its service agent or similar qualified person to avoid hazard.
- Consult repair manual or owner's guide before attempting to service this product. All safety precautions must be followed.
- Dispose of properly in accordance with federal or local regulations.
- Follow handling instructions carefully.
- Do not store explosive substances, such as aerosol cans with a flammable propellant, in this appliance.



WARNING! Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.



WARNING! Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.



WARNING! Do not damage the refrigerant circuit.



WARNING! Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.



CAUTION! Children should be supervised to ensure that they do not play with the appliance.



DANGER! Risk of child entrapment. Before throwing away an old appliance:

- Remove the door or lid.
- Leave shelves in place so that children may not easily climb inside.



DANGER! Do not add a lock to the door or lid. This can cause child entrapment and harm.

- This appliance is not intended for use by persons (including children) whose physical, sensory or mental capabilities may be different or reduced, or who lack experience or knowledge, unless such persons receive supervision or training to operate the appliance by a person responsible for their safety.

This appliance is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments.
- Farmhouses, bed and breakfasts, hotels, motels and other residential type environments.
- Catering and similar non-retail applications.

GROUNDING INSTRUCTIONS

- This appliance must be grounded. Grounding reduces the risk of electrical shock by providing an escape wire for the electrical current.
- This appliance has a cord that has a grounding wire with a 3-prong plug. The power cord must be plugged into an outlet that is properly grounded. If the outlet is a 2-prong wall outlet, it must be replaced with a properly grounded 3-prong wall outlet. The serial rating plate indicates the voltage and frequency the appliance is designed for.



WARNING! Improper use of the grounding plug can result in a risk of electric shock. Consult a qualified electrician or service agent if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded.

- Do not connect appliance to extension cords or together with another appliance in the same wall outlet. Do not splice the power cord. Do not under any circumstances cut or remove the third grounding prong from the power cord. Do not use extension cords or ungrounded (two-prong) adapters.

INSTALLATION

LOCATION



NOTE: Moving the appliance requires at least two people.

- Place the appliance on a floor that is strong enough to support it when it is fully loaded.
- Do not place the appliance in direct sunlight or near sources of heat, such as a stove or heater, as this can increase electrical consumption. Extreme cold ambient temperatures may also cause the appliance to perform improperly.
- Do not use the appliance near water, for example in a wet basement or near a sink.
- This appliance is intended for indoor use only. It is not designed for outside installation, including anywhere that is not temperature controlled (garages, porches, vehicles, etc.).

SETUP

 
- Remove interior and exterior packaging prior to installation. Wipe the outside of the appliance with a soft, dry cloth and the inside with a lukewarm wet cloth.
- Before connecting the appliance to a power source, let it stand upright for approximately six hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.
- Allow 5 inches of space between the back, sides and top of the appliance and all adjacent walls.

- This appliance is intended for free-standing installation only and is not intended to be built into a cabinet or counter. Building in this appliance can cause it to malfunction.


LEVELING

There is an adjustable leg on the bottom of the appliance that can be turned up or down to ensure that the appliance is level.


1. Turn the leveling leg counterclockwise as far as it will go, until the top of the foot is touching the bottom of the cabinet. (See Figure 1)

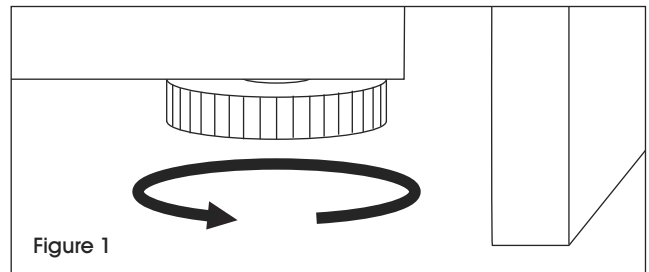

 2. Slowly turn the leveling leg clockwise until the appliance is level. (See Figure 2)

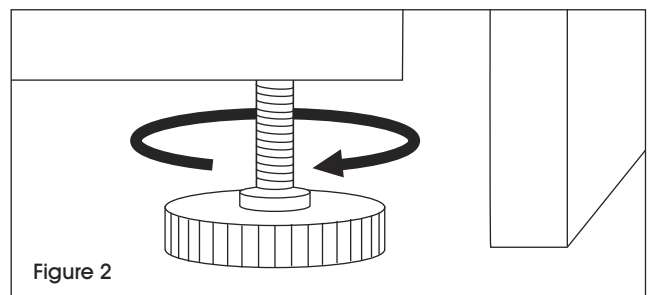

FEATURES

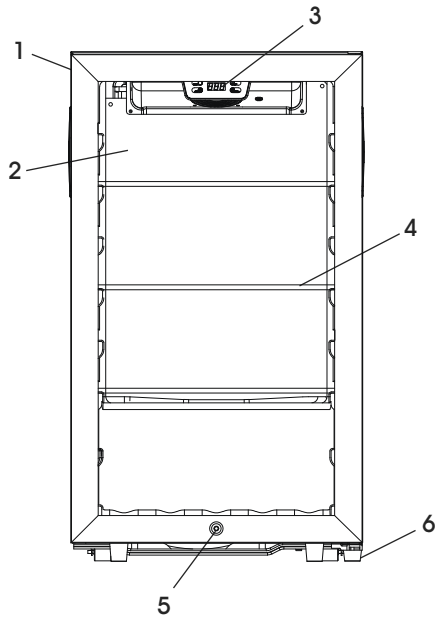 

PARTS

#	DESCRIPTION
1	Magnetic Door Gasket
2	Tempered Glass Door
3	Control Panel
4	Glass Shelves
5	Door Lock
6	Leveling Leg

OPERATION



IMPORTANT! This appliance is designed for storing and cooling beverages and drinks. Do not store perishable food, medicine or other products in this appliance.


- The recommended ambient temperature for this appliance is between 64°F – 100°F. Using this appliance in very cold or very warm ambient conditions can cause it to malfunction.

CONTROL PANEL

- Power Button:** press and hold this button for three seconds to turn the appliance on or off. (See Figure 3)

- Light Button:** press to turn the interior light on or off.
- Display:** shows the set temperature.
- Up and Down Buttons:**
 - Use to set the desired temperature. Each press will increase or decrease the set temperature in 1° increments.
 - Press the up and down buttons at the same time to change the temperature scale between Celsius and Fahrenheit.

 Figure 3

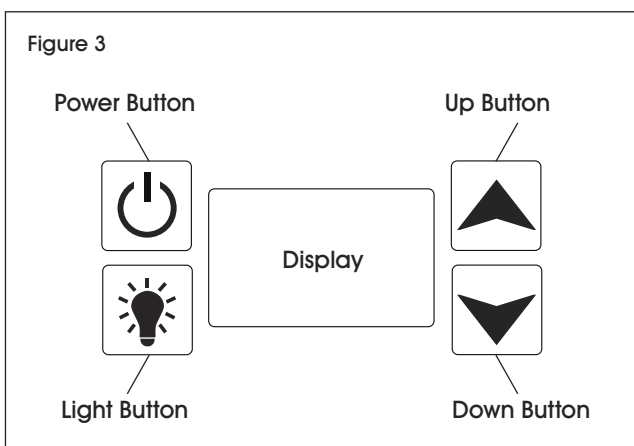


DOOR REVERSAL




IMPORTANT! If the appliance is placed on its back or side for any length of time during this process, it must be allowed to remain upright for six hours before plugging it in to avoid damage to the internal components.

 
1. Remove the lower hinge from the bottom of the cabinet. Remove the adjustable foot. Remove the door from the cabinet. (See Figure 4)

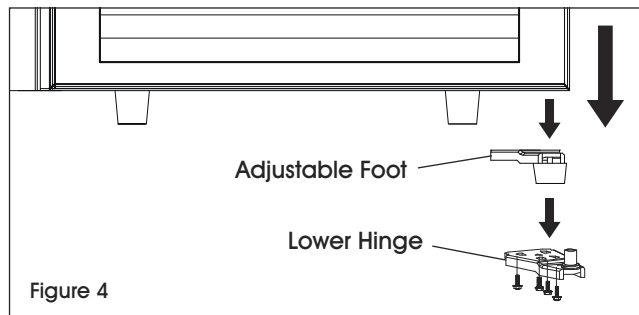

 
2. Remove the hinge sleeve from the bottom left side of the door and install it on the bottom right side of the door. Remove the door limit from the bottom right side of the door and install it on the bottom left side of the door. (See Figure 5)

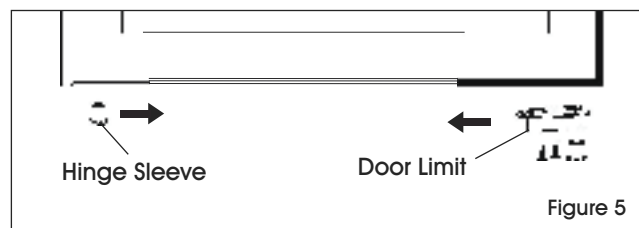

 3. Remove the screw hole covers from the upper left side of the cabinet. Remove the upper hinge from the upper right side of the cabinet. Remove the screw hole cover from the upper left side of the door and install it on the upper right side of the door. (See Figure 6)

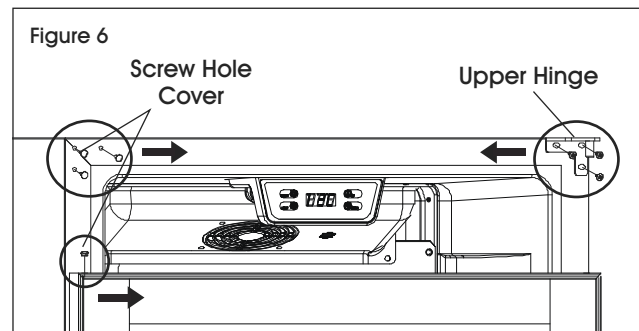

 
4. Install the upper hinge on the upper left side of the cabinet. Install the screw hole covers on the upper right side of the cabinet. Install the door onto the cabinet. Install the adjustable foot and lower hinge on the lower left side of the cabinet. (See Figure 7)

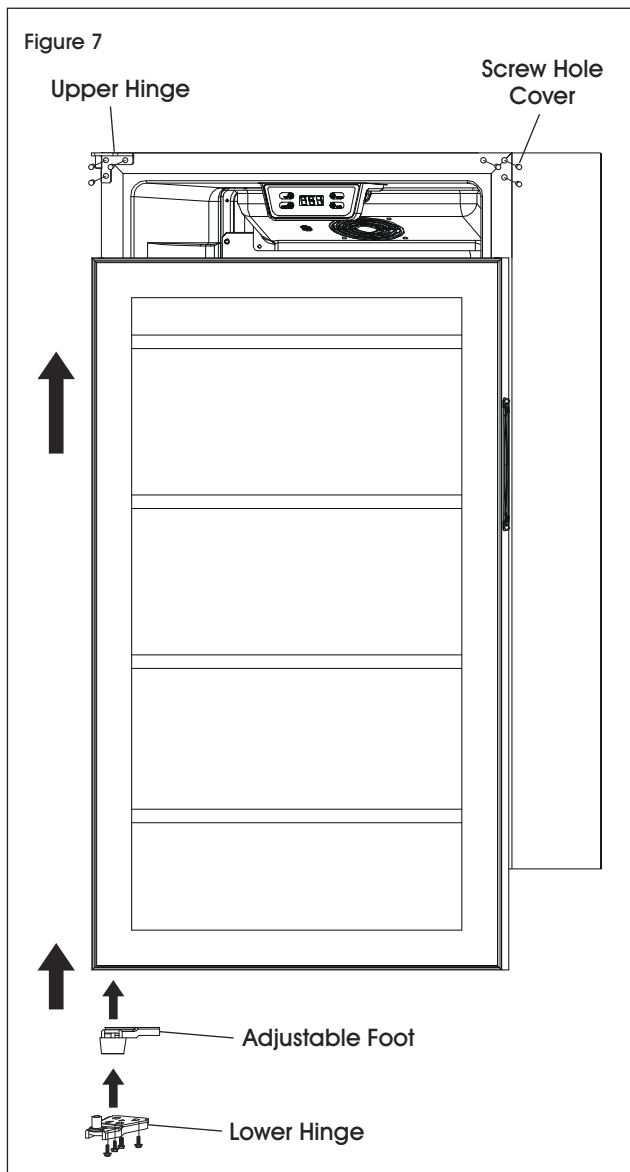

OPERATION CONTINUED

SHELF ADJUSTMENTS

 1. To remove a shelf from its locked position, lift the rear of the shelf upward and then slide the shelf out of the unit. (See Figure 8)

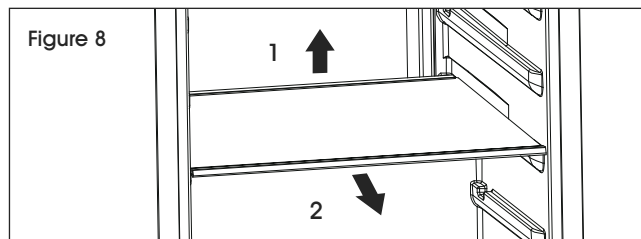

2. To replace the shelf, ensure it is resting securely on the support brackets and then push inward until the shelf locks into place. (See Figure 8)

STOCKING

- This appliance has a maximum capacity of 115 355-mL cans.

MAINTENANCE



IMPORTANT! Ensure the appliance is unplugged before cleaning.

CLEANING

- To clean the inside of the appliance, use a soft cloth and a solution of a tablespoon of baking soda to one quart of water or a mild soap solution or some mild detergent.
- Wash removable shelves in a mild detergent solution, then dry and wipe with a soft cloth.
- Clean the outside with a soft, damp cloth and some mild detergent.
- Clean the area where the door seals against the cabinet with a soapy cloth. Rinse with a damp cloth and let dry.



NOTE: Do not use cleaners containing ammonia or alcohol. Ammonia or alcohol can damage the appearance of the appliance. Never use any commercial or abrasive cleaners or sharp objects on any part of the appliance.

POWER FAILURE

- Most power failures are corrected within a few hours and should not affect the temperature of the appliance if you minimize the number of times the door is opened. If power will be off for a longer period, take the proper steps to protect the contents.



NOTE: Wait three to five minutes before attempting to restart the refrigerator if operation has been interrupted.

DEFROST

- This appliance is equipped with an automatic defrost function and does not require manual defrosting. Defrost water from the appliance is channeled into a drip tray located above the compressor. Heat transfer from the compressor causes the defrost water to evaporate.

VACATION

- Short vacations: Leave the appliance operating during vacations of less than three weeks.
- Long vacations: If the appliance will not be used for several months, remove all items and turn off the appliance. Clean and dry the interior thoroughly. To prevent odor and mold growth, leave the door open slightly, propping it open if necessary.

MOVING

1. Ensure the appliance is empty.
2. Secure the shelves and door with tape.
3. Turn the adjustable leg up to the base to avoid damage.
4. Protect the outside of the appliance with a blanket or similar item.
5. Ensure the appliance stays in the upright position during transportation. If the appliance is placed on its back or side during transportation, upon reaching the destination, allow it to remain upright for six hours before plugging in.

OPERATION CONTINUED

DISPOSAL

- This appliance should not be treated as regular household waste. It should be taken to the appropriate waste collection point for recycling of electrical components. For information on local waste collection points, contact your local waste removal agency or government office.

TROUBLESHOOTING

OPERATING ISSUE	POSSIBLE CAUSE
No power.	A fuse may be blown or the circuit breaker tripped. Plug is not fully inserted into the wall outlet.
Internal temperature not cold enough. Appliance runs continuously.	Door is not shut properly or opened excessively. Exhaust vent is obstructed. Recently added a large quantity of warm food to the cabinet. Close proximity to heat source or direct sunlight. Ambient temperature or humidity is very high. Possible system leak, evaporator fan failure or compressor failure.
Condensation on the cabinet or door.	Door is not shut properly or opened excessively. Ambient temperature or humidity is very high.
Vibration or excessive noise.	Appliance may not be level. Gurgling noises of coolant moving through the lines is normal. Expansion and contraction of the internal walls may cause a cracking sound.
Door will not close or will not stay closed.	Appliance may not be level. Gasket may be dirty. Shelves may be positioned incorrectly.

ULINE

1-800-295-5510
uline.com