

ULINE H-1469 COMFORT-GRIP KNIFE QUICK CHANGE

1-800-295-5510 uline.com

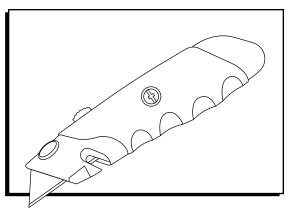


BLADE REPLACEMENT INSTRUCTIONS

1. Push the thumb slider to extend the blade fully out. (See Figure 1)

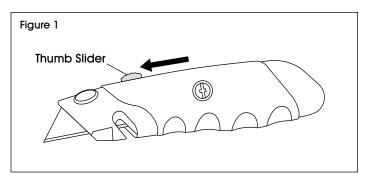

- Press and hold the red button on the side of the knife and carefully remove the old blade. (See Figure 2)
- 3. Holding the red button, insert the new blade into the handle. (See Figure 2)

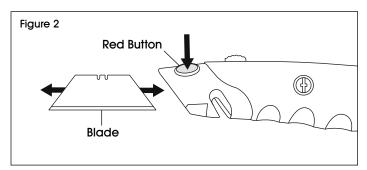

- 4. Release the red button and retract the blade.
 - NOTE: Use a sharps container for used blade disposal.

