


**ULINE** H-1787

**FOLDING HAND TRUCK  
100 LB. CAPACITY**

1-800-295-5510

uline.com


Para Español, vea página 2.  
Pour le français, consulter la page 3.

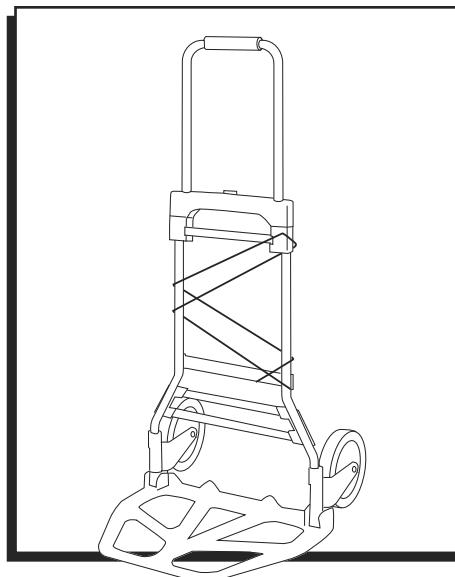

## OPERATING INSTRUCTIONS


1. Position the truck as shown. (See Figure 1)

Figure 1

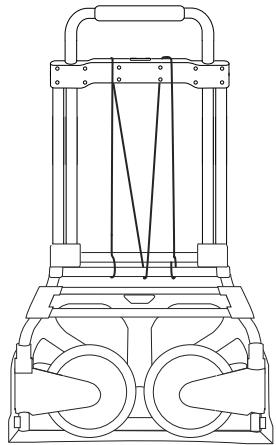


3. By pulling down the noseplate, both wheels will automatically extend out. (See Figure 3)

Figure 3

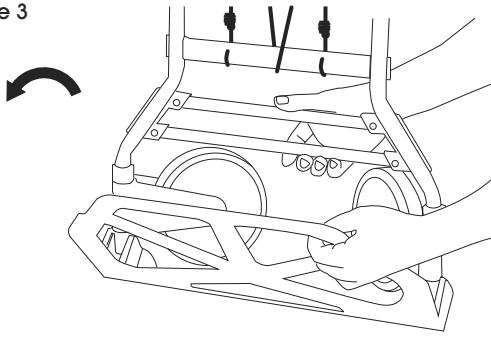


4. Use bungee cord to secure cargo. (See Figure 4)

Figure 4

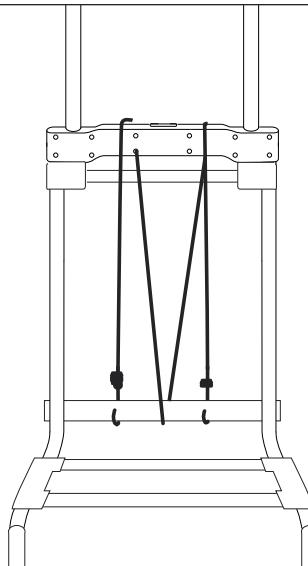

2. To extend handle, press top button and pull up handle. (See Figure 2)

Figure 2

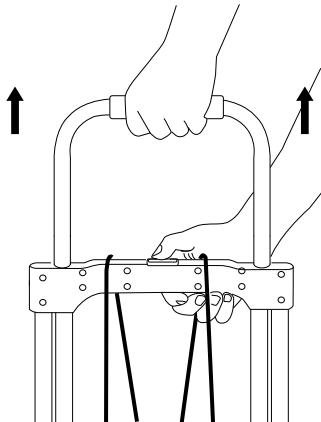


**ULINE** H-1787

**DIABLITO PLEGABLE  
45 KG (100 LBS)  
DE CAPACIDAD**

**800-295-5510**


[uline.mx](http://uline.mx)

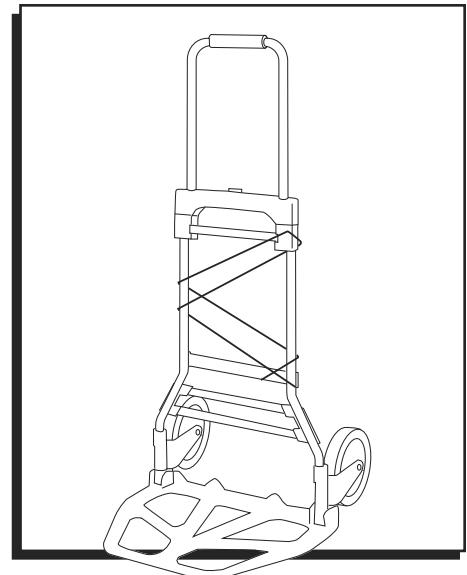

## FUNCIONAMIENTO


1. Posicione el diablito como se indica. (Vea Diagrama 1)

Diagrama 1

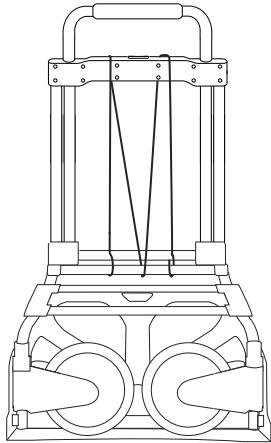


3. Al bajar la placa, ambas llantas se extenderán automáticamente. (Vea Diagrama 3)

Diagrama 3

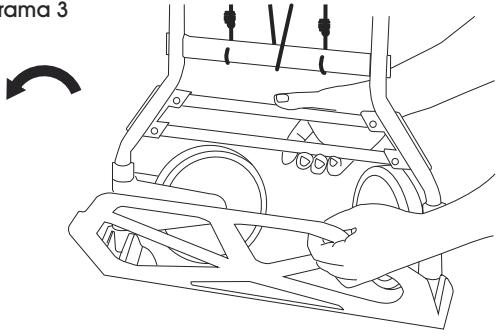


4. Use la cuerda elástica para asegurar la carga. (Vea Diagrama 4)

Diagrama 4

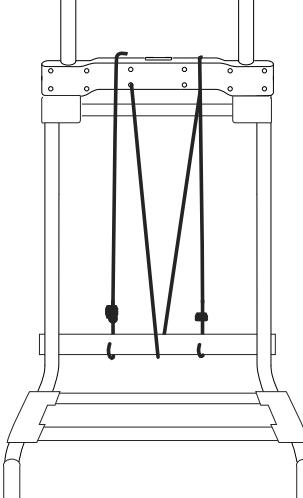

2. Para extender el asa, presione el botón de la parte de arriba y levante el asa. (Vea Diagrama 2)

Diagrama 2

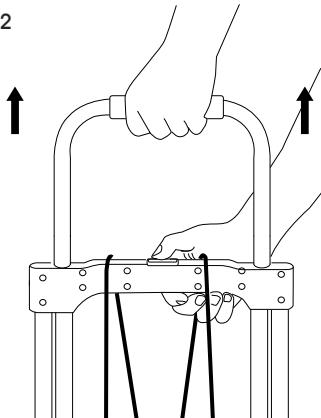


**ULINE H-1787**

**CHARIOT MANUEL REPLIABLE  
CAPACITÉ DE 45 KG (100 LB)**

1 800 295-5510

uline.ca

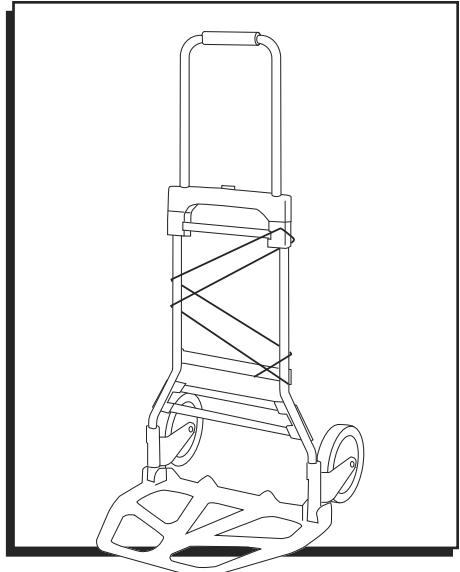

## INSTRUCTIONS D'UTILISATION

1. Positionnez le chariot de la façon illustrée.  
(Voir Figure 1)
3. L'abaissement de la bavette déploiera automatiquement les deux roues. (Voir Figure 3)

Figure 1


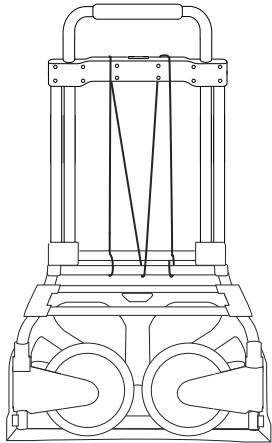


Figure 3

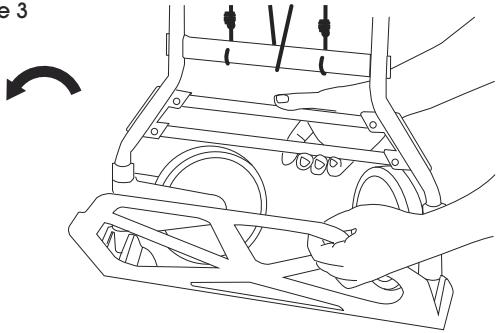

2. Pour déployer la poignée, appuyez sur le bouton supérieur et soulevez la poignée. (Voir Figure 2)
4. Fixez la charge avec un tendeur élastique.  
(Voir Figure 4)

Figure 2

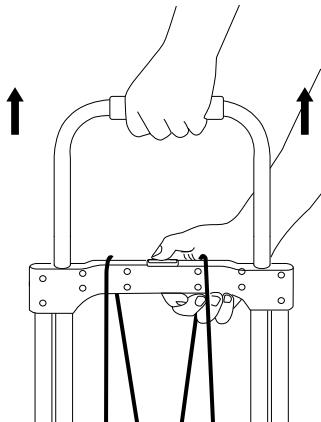


Figure 4

