
**ASSEMBLY**


CAUTION! Sign holder may have sharp edges. Use extreme caution to avoid outside and inside corners of frame edges.

3. Place poster in frame and replace the cover. (See Figure 3)

1. Flip open each side of the snap frame. (See Figure 1)

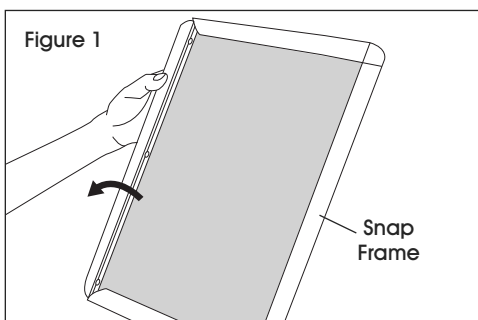

2. Remove the cover by lifting the indented area on the side of the cover. (See Figure 2)

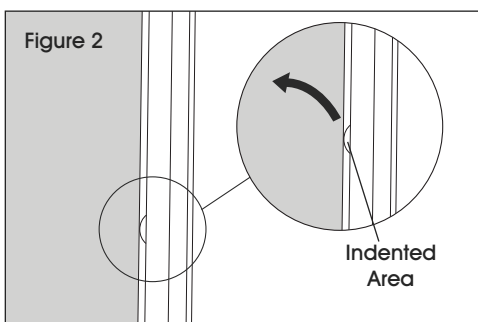

4. While holding poster and cover in frame, snap the edges of the frame back into the closed position, avoiding the corners of the frame. (See Figure 4)

