


ULINE H-10152

SANITAIRE® WIDE TRACK INDUSTRIAL VACUUM

1-800-295-5510
uline.com

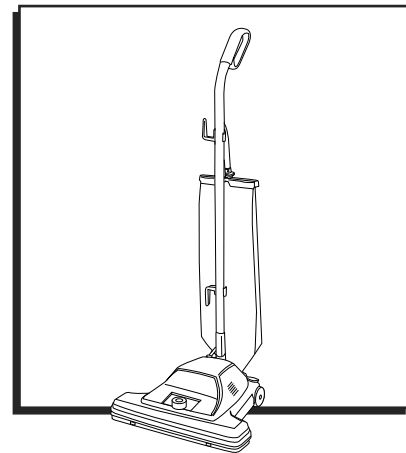

TROUBLESHOOTING

OPERATING ISSUE	RECOMMENDATIONS
Motor will not start.	Turn power switch on. Push plug securely into outlet. Try another outlet.
Little or no suction.	A clog may be in the bottom of the vacuum or in the dirt tube. <ul style="list-style-type: none">• Remove bottom metal plate and check for clogs in base or brush roll.• Unzip cloth bag, remove dust bag and check for clogs in the dirt tube. Belt may be broken. Replace belt.
Motor will not start.	Turn power switch on. Push plug securely into outlet. Try another outlet.
Little or no suction.	A clog may be in the bottom of the vacuum or in the dirt tube. <ul style="list-style-type: none">• Remove bottom metal plate and check for clogs in base or brush roll.• Unzip cloth bag, remove dust bag and check for clogs in the dirt tube. Belt may be broken. Replace belt.
Vacuum does not clean.	Dust bag may be full. Replace the dust bag if 2/3 or more full. Adjust carpet height setting to lower position. Check for clogs that restrict airflow. Check for worn or broken belt and replace if necessary.

TROUBLESHOOTING CONTINUED

OPERATING ISSUE	RECOMMENDATIONS
Vacuum is hard to push.	Adjust carpet height setting to higher position.
Vacuum is clogged.	Remove bottom metal plate. Check for clog in base and/or brush roll. Remove dust bag. Check for clog where dust bag attaches to dust bag collar and where the dust bag attaches to the dirt tube.
Burning smell.	The belt may be damaged or something may be caught in the brush roll. Check brush roll and remove obstruction. Replace belt.
Dust leaking out of vacuum.	Check to ensure paper bag collar is properly attached inside cloth bag. Check paper bag for tears.
Belt is broken or worn.	Replace belt.
Belt continues to break.	The brush roll should be positioned with the low side of belt aligned within the belt groove.

ULINE

1-800-295-5510
uline.com