



TROUBLESHOOTING

OPERATING ISSUE	POSSIBLE CAUSE
No power.	A fuse may be blown or the circuit breaker tripped. Plug is not fully inserted into the wall outlet.
Internal temperature not cold enough. Appliance runs continuously.	Door is not shut properly or opened excessively. Exhaust vent is obstructed. Recently added a large quantity of warm food to the cabinet. Close proximity to heat source or direct sunlight. Ambient temperature or humidity is very high. Possible system leak, evaporator fan failure or compressor failure.
Condensation on the cabinet or door.	Door is not shut properly or opened excessively. Ambient temperature or humidity is very high.
Vibration or excessive noise.	Appliance may not be level. Gurgling noises of coolant moving through the lines is normal. Expansion and contraction of the internal walls may cause a cracking sound.
Door will not close or will not stay closed.	Appliance may not be level. Gasket may be dirty. Shelves may be positioned incorrectly.