


ULINE H-7423
RECHARGEABLE
MAGLITE® LED
FLASHLIGHT

1-800-295-5510
 uline.com

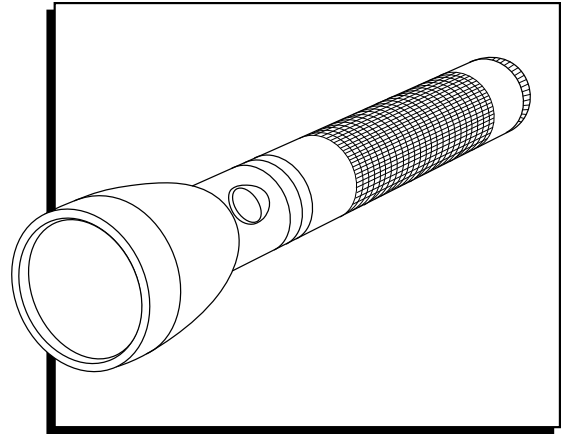

TROUBLESHOOTING

OPERATING ISSUE	RECOMMENDATIONS
Flashlight does not light.	Ensure battery is installed, with positive (+) end toward head of flashlight. Ensure large end of battery spring is snapped into tail cap. Tighten tail cap. Ensure unplated areas of tail cap and barrel are clean.
Unsure if battery is charged.	Check battery charge. 1. Place flashlight in recharger/cradle. Ensure LED lights up. 2. Charge for 15 minutes. Check for light. If it lights (even momentarily) charge flashlight. 3. If it does not light, replace battery.
Switch sticks.	Call Uline Customer Service at 1-800-295-5510 for assistance.
Flashlight works intermittently.	Check for damage to battery casing. Foreign particles inside barrel.
Poor or no spot.	Ensure battery is installed correctly. Ensure battery is charged. Clean the lens. Check the mode and tighten all parts. Open the head and check the emitter.

TROUBLESHOOTING

OPERATING ISSUE	RECOMMENDATIONS
Recharger/cradle LED indicator does not light.	Tighten tail cap. Check plug connection to converter. Check plug to power source. Ensure large end of battery spring is snapped into tail cap.

ULINE

1-800-295-5510
uline.com