


ULINE H-2536
SANITAIRE®
BACKPACK VACUUM

1-800-295-5510
uline.com

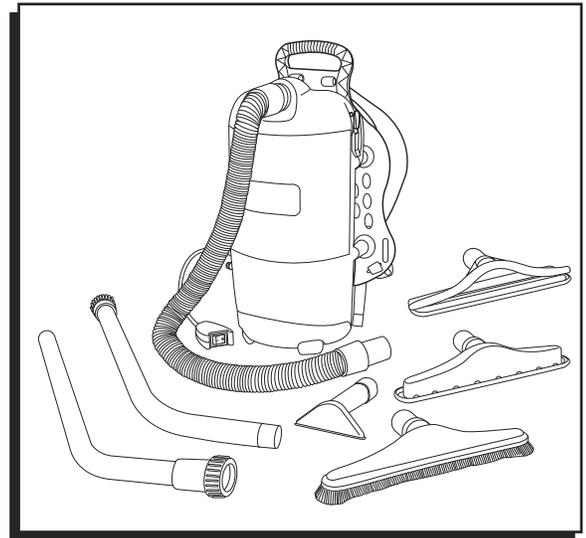


TROUBLESHOOTING

OPERATING ISSUE	RECOMMENDATIONS
There is little or no suction.	<p>There may be a clog in the hose or wands. If so, take the hose and wands apart and remove the clog.</p> <p>Open the lid and ensure that the paper bag is not full, the cloth filter is correctly located, and that the flexible ring provides a proper seal when the lid is closed.</p> <p>Check to make sure pre-motor and bottom exhaust filters are clean.</p>
Vacuum turns off while in use.	<p>The vacuum may turn off due to overheating. Wait until the vacuum has cooled down. Press the motor reset button on the bottom of the vacuum to restart.</p> <p>Check to make sure there are no clogs.</p>
Vacuum has a burning smell.	<p>Check to see if cord is damaged.</p>
Does not clean carpet.	<p>Be sure hose is secure on vacuum.</p> <p>Check hose, wands and attachment for clogs.</p>
Unable to secure attachments	<p>See Assembly section on page 3 of instructions.</p> <p>Ensure metal retaining ring sits in groove of tool neck to secure inside wand.</p>

ULINE H-2536

**SANITAIRE^{MD} –
ASPIRATEUR DORSAL**

1 800 295-5510
uline.ca

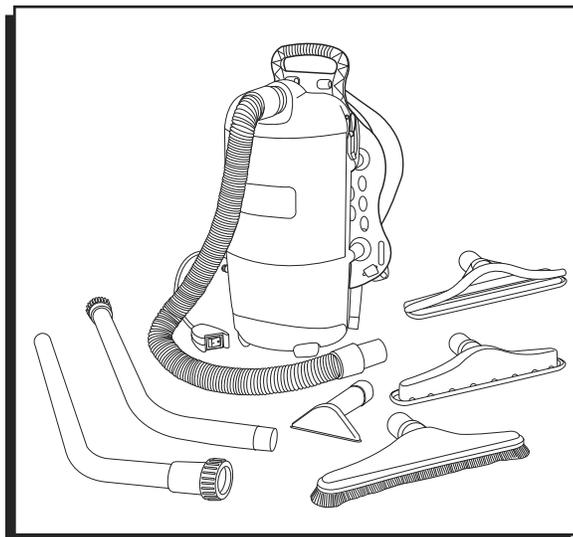

DÉPANNAGE

PROBLÈME	RECOMMANDATIONS
Il n'y a que peu ou pas de succion.	<p>Le tuyau ou le tube rallonge sont peut-être obstrués. Le cas échéant, démontez le tuyau et le tube rallonge, et retirez ce qui cause l'obstruction.</p> <p>Ouvrez le couvercle et assurez-vous que le sac à poussière en papier n'est pas plein, que le filtre en tissu est correctement situé et que l'anneau souple assure une bonne étanchéité lorsque le couvercle est fermé.</p> <p>Assurez-vous que les filtres d'évacuation près du moteur et du bas sont propres.</p>
L'aspirateur s'éteint en cours d'utilisation.	<p>L'aspirateur peut s'éteindre en raison d'une surchauffe. Attendez jusqu'à ce que l'aspirateur refroidisse. Appuyez sur le bouton de réinitialisation du moteur au bas de l'aspirateur pour redémarrer.</p> <p>Assurez-vous que le tuyau n'est pas obstrué.</p>
L'aspirateur dégage une odeur de brûlé.	<p>Vérifiez si le cordon d'alimentation est endommagé.</p>
L'aspirateur ne nettoie pas les tapis.	<p>Assurez-vous que le tuyau est bien fixé à l'aspirateur.</p> <p>Vérifiez si le tuyau, le tube rallonge et les accessoires sont obstrués.</p>
Impossible de fixer les accessoires	<p>Voir la section d'assemblage à la page 15 des instructions.</p> <p>Assurez vous que la bague de retenue en métal s'insère dans la rainure du collier de l'outil pour fixer à l'intérieur du tube rallonge.</p>