



H-1105ADD, H-1223ADD
H-1871ADD, H-3617ADD
H-8447ADD

ADDITIONAL SHELF FOR CABINETS

1-800-295-5510
uline.com




INSTALLATION

1. Insert shelf at desired level. (Figure 1)



NOTE: In order to place shelf, tilt the shelf slightly to the left or right before inserting into the unit.

2. Ensure shelf is inserted into all lances on all cabinet walls.

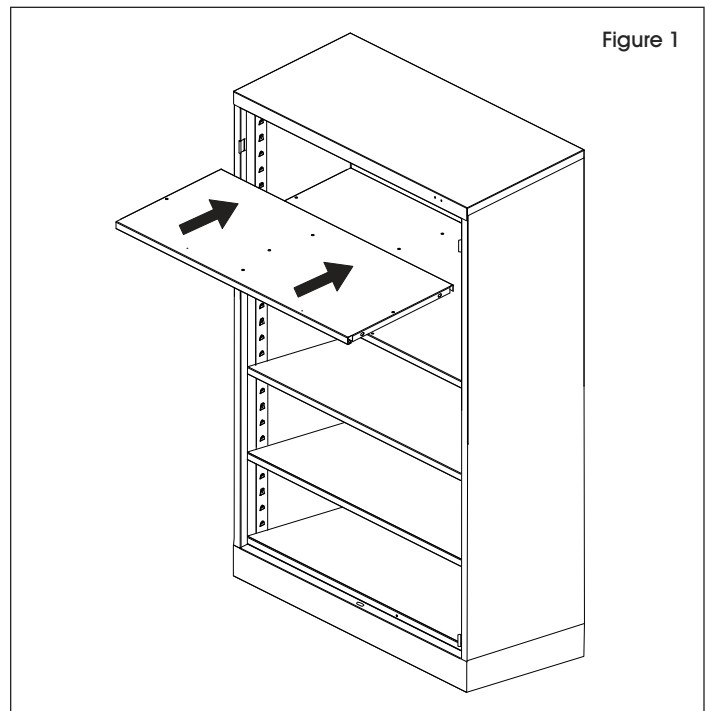

ULINEH-1105ADD, H-1223ADD
H-1871ADD, H-3617ADD
H-8447ADD

REPISA ADICIONAL PARA GABINETES

800-295-5510
uline.mx


INSTALACIÓN

1. Inserte la repisa al nivel deseado. (Diagrama 1)



NOTA: Para que la repisa quede en su lugar debe ladearla ligeramente hacia la izquierda o la derecha antes de insertarla en la unidad.

2. Asegúrese de que la repisa quede insertada en todas las lancetas de las paredes del gabinete.

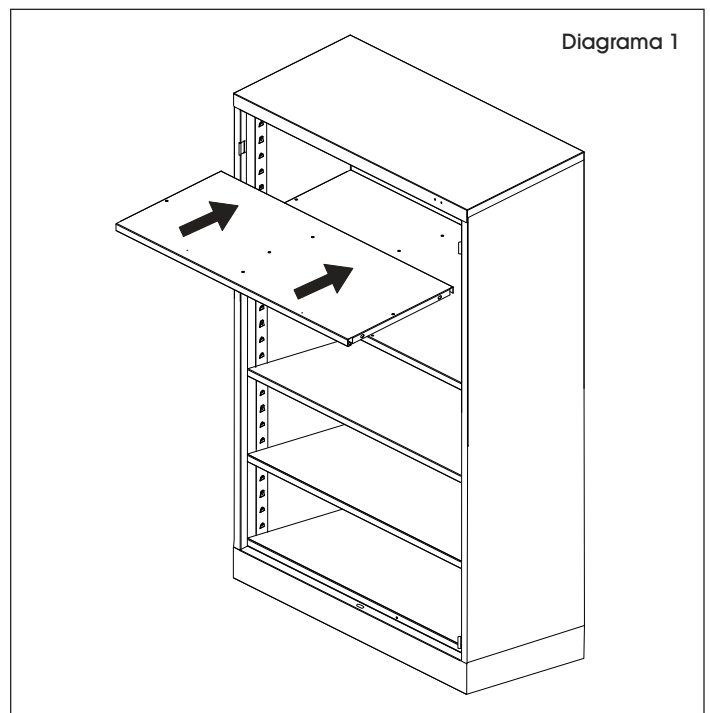

ULINEH-1105ADD, H-1223ADD
H-1871ADD, H-3617ADD
H-8447ADD

TABLETTE SUPPLÉMENTAIRE POUR ARMOIRES

1-800-295-5510
uline.ca

INSTALLATION

1. Insérez la tablette à la hauteur désirée. (Figure 1)



REMARQUE : Pour installer la tablette, inclinez-la légèrement vers la gauche ou la droite avant de l'insérer dans l'unité.

2. Assurez-vous que la tablette est insérée dans tous les crochets des panneaux de l'armoire.

