


ULINE H-11487

PURELL® CS2 PUSH DISPENSER

1-800-295-5510
uline.com

TOOLS NEEDED


For optional hardware installation (not included):




Drill



1/4" Drill Bit




Phillips
Screwdriver



Wall Anchor x 4



#10 x 1" Screw x 4

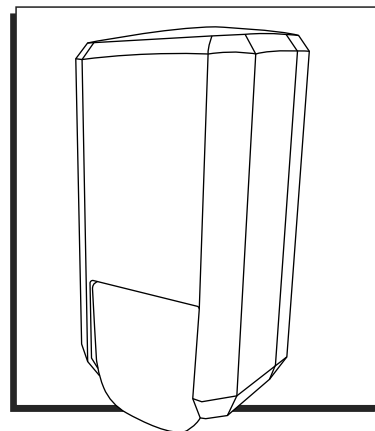

INSTALLATION

ADHESIVE TAPE INSTALLATION



NOTE: Use only on smooth surfaces.



IMPORTANT! Install dispenser at least 4" above countertop.


1. Clean installation surface with an alcohol prep pad (not included). Allow surface to dry for 60 seconds.



NOTE: When installing on marlite wallboard, use scouring cleanser. Rinse and dry thoroughly.

2. Open dispenser by pushing release button on bottom of dispenser. (See Figure 1)
3. Peel paper backing off of adhesive tape located on back of dispenser. (See Figure 1)

Figure 1

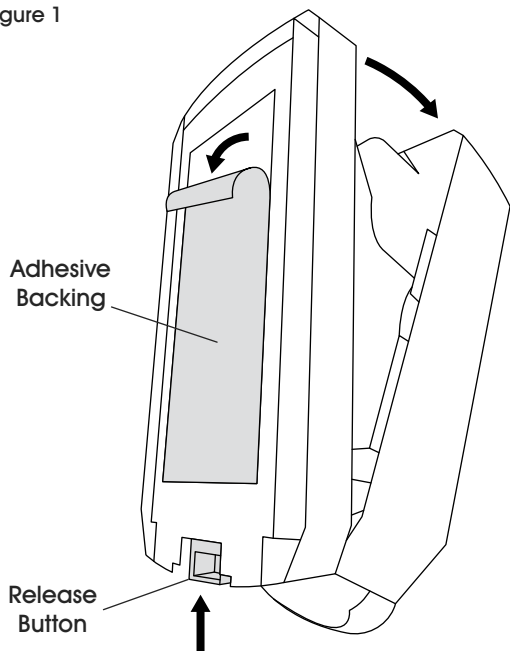


4. Press dispenser firmly onto mounting surface. Apply pressure to the inside of back plate for 30 seconds. (See Figure 2)



NOTE: Do not load refill for at least 24 hours.

Figure 2

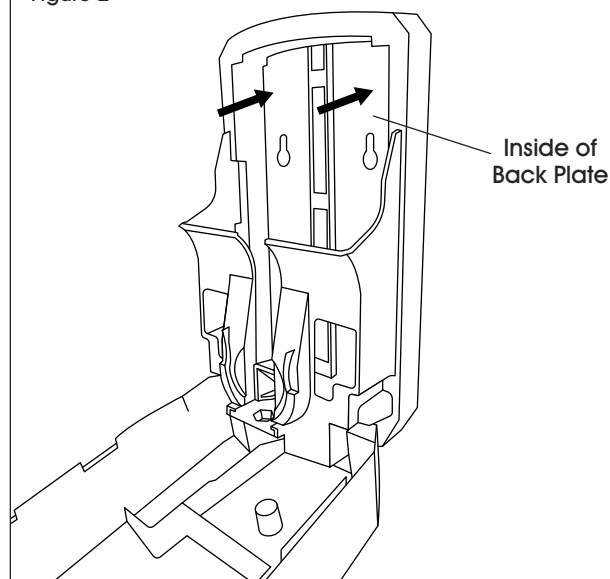

INSTALLATION CONTINUED

HARDWARE INSTALLATION




NOTE: Use on rough or smooth surfaces.
Hardware is not included.



IMPORTANT! Install dispenser at least 4" above countertop.


1. Open dispenser by pushing release button on bottom of dispenser. (See Figure 3)

Figure 3

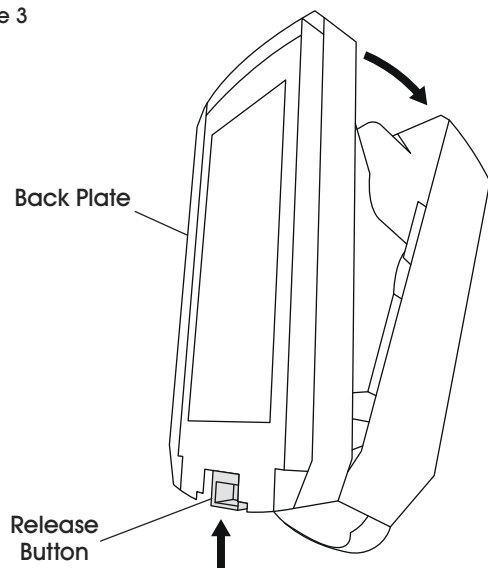


2. Use the dispenser back plate as a template. Pierce adhesive tape on back plate at mounting hole locations to mark and drill four holes using 1/4" drill bit. (See Figure 4)

Figure 4

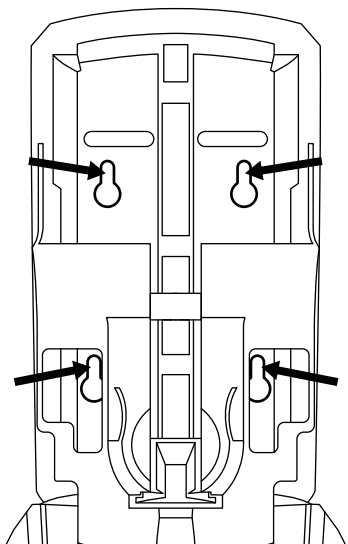


3. Install #10 x 1" anchors into previously drilled holes, flush against mounting surface. (See Figure 5)

Figure 5

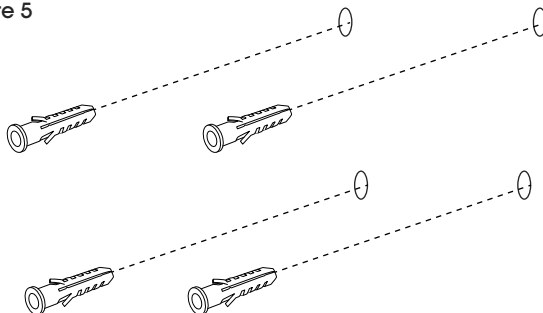

4. Insert self-tapping Type A #10 x 1" screws into holes. Leave 1/2" between screw head and wall. (See Figure 6)

Figure 6

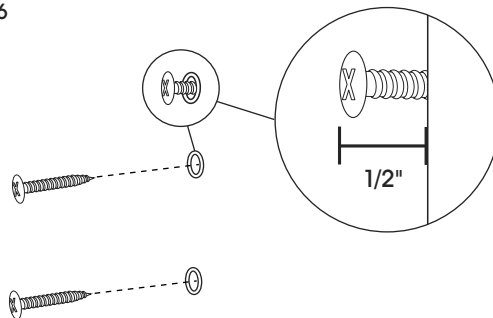


5. Place dispenser over screws on wall. Tighten with Phillips screwdriver. (See Figure 7)



NOTE: Do not overtighten screws.


Figure 7

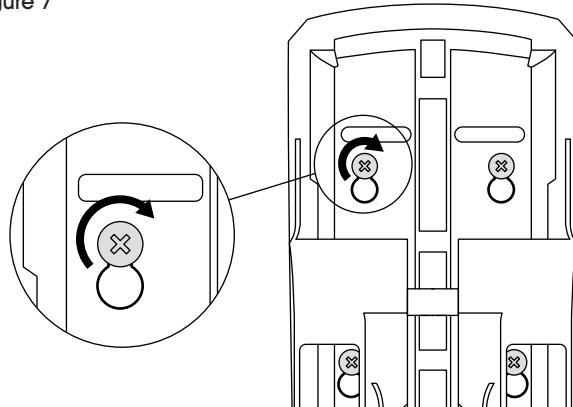

REFILL INSTALLATION


1. Open dispenser by pushing release button on bottom of dispenser. (See Figure 8)

Figure 8

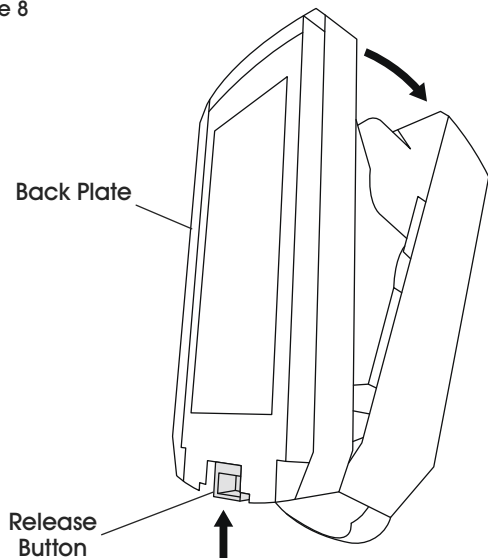

2. Insert refill into dispenser with nozzle in front. (See Figure 9)


Figure 9

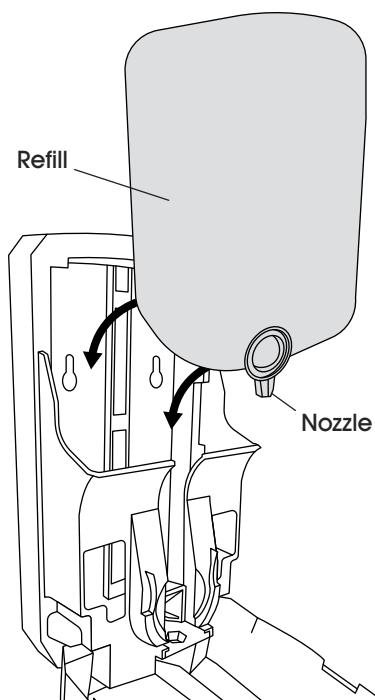

3. Push nozzle and refill down until fully seated. (See Figure 10)

4. Tuck refill completely into dispenser. (See Figure 10)

Figure 10

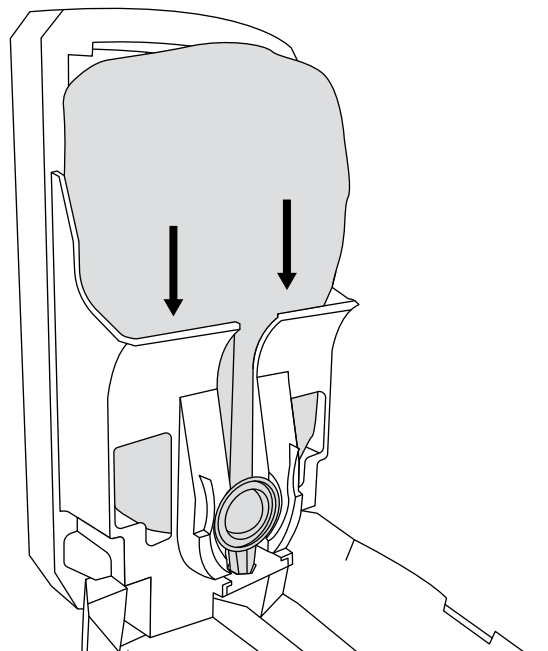

5. Close dispenser cover.

ULINE

1-800-295-5510
uline.com