

**ULINE** H-1175

# GOJO® WALL-MOUNT PUSH DISPENSER

1-800-295-5510  
uline.com

## TOOLS NEEDED


For optional hardware installation (not included):



Drill



1/4" Drill Bit

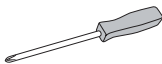


Phillips  
Screwdriver



Type A #10 x 1"  
Screw x 2



#10 x 1" Anchor x 2

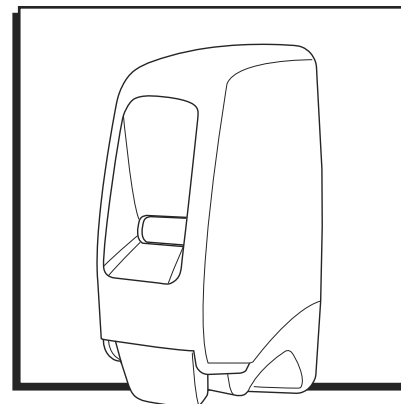

## INSTALLATION

### ADHESIVE TAPE INSTALLATION




**NOTE:** Use only on smooth surfaces.



**IMPORTANT!** Install dispenser at least 6" above countertop.


1. Clean installation surface with an alcohol prep pad (not included). Allow surface to dry for 60 seconds.
2. Open dispenser by pushing release button on bottom of dispenser. (See Figure 1)

Figure 1

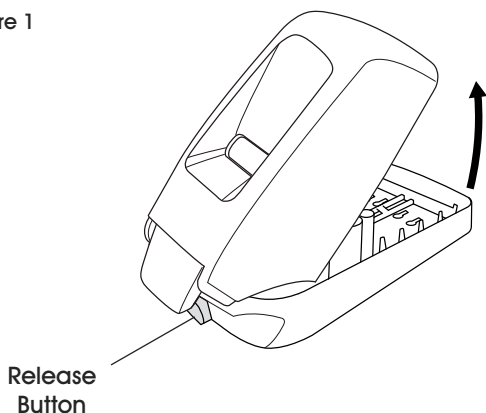

3. Peel paper backing off of adhesive tape located on back of dispenser. (See Figure 2)

Figure 2

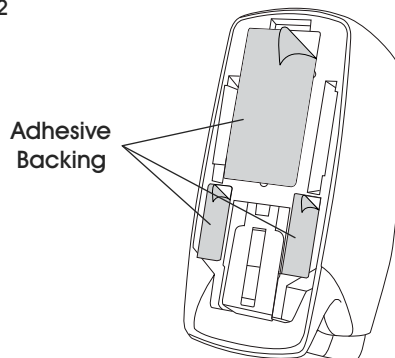


4. Press dispenser firmly onto mounting surface. Apply pressure to the inside of back plate for 30 seconds. (See Figure 3)



**NOTE:** Do not load refill for at least 24 hours.

Figure 3

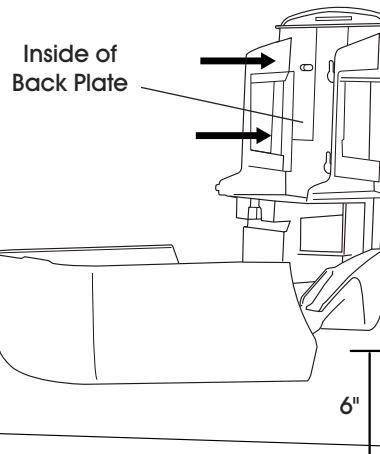

## INSTALLATION CONTINUED

### HARDWARE INSTALLATION




**NOTE:** Use on rough or smooth surfaces.  
Hardware is not included.




**IMPORTANT!** Install dispenser at least 6" above countertop.


1. Open dispenser by pushing release button on bottom of dispenser. (See Figure 4)

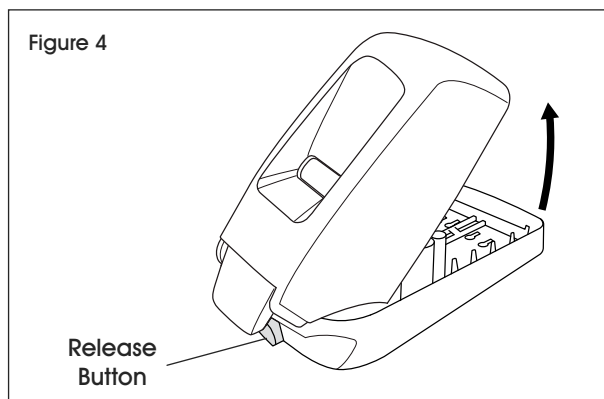


2. Use the dispenser back plate as a template. Pierce adhesive tape on back plate to mark and drill two holes using 1/4" drill bit. (See Figure 5)

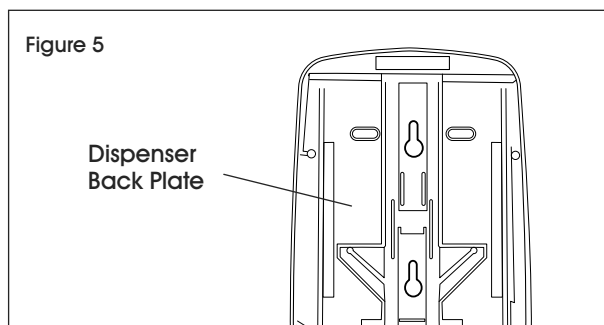

3. Install #10 x 1" anchors into previously drilled holes, flush against mounting surface. (See Figure 6)

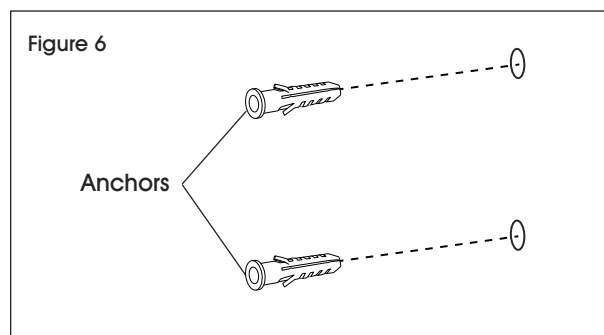


4. Insert self-tapping Type A #10 x 1" screws into holes. Leave 1/2" between screw head and wall. (See Figure 7)

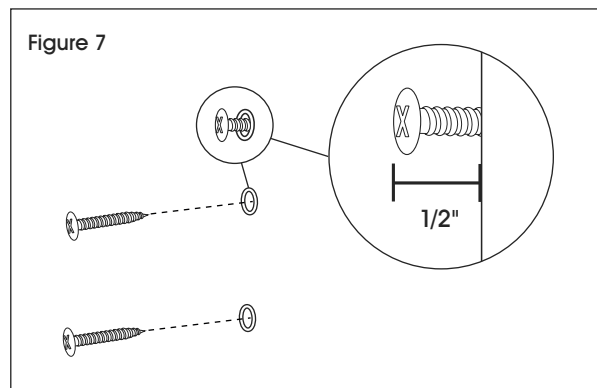

5. Place dispenser over screws on wall. Tighten with Phillips screwdriver. (See Figure 8)




**NOTE:** Do not overtighten screws.


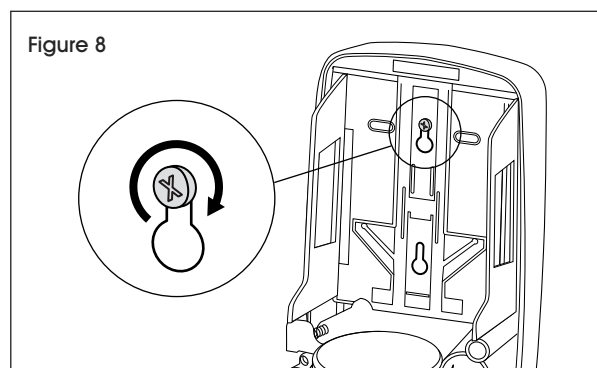


## REFILL INSTALLATION


1. Open dispenser by pushing release button on bottom of dispenser. (See Figure 9)

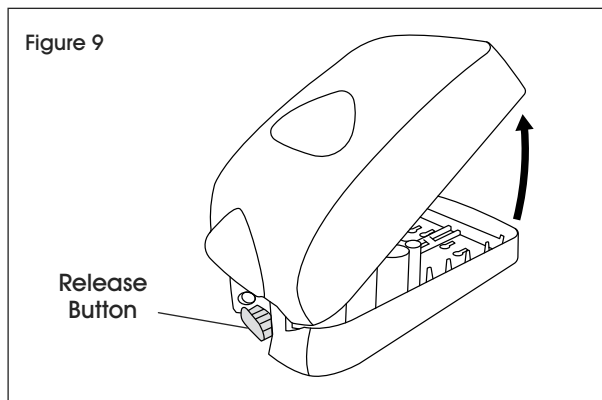


2. Tear off the perforated opening on the 800 mL refill box. (See Figures 10-11)

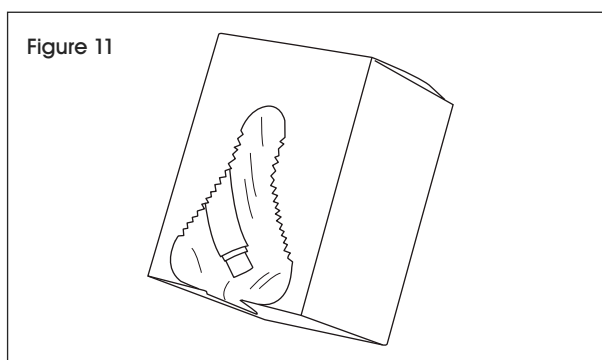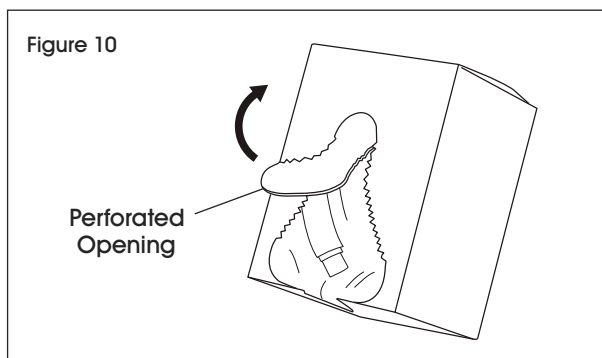

3. Pull the dispensing tube out of the box. (See Figure 12)

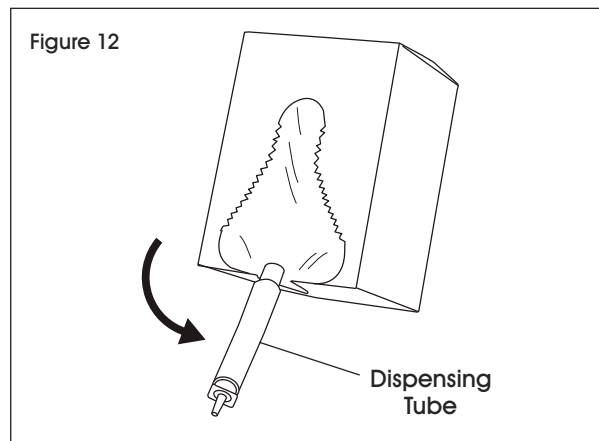

4. Place the full box in the dispenser, feeding the dispensing tube into the pump housing. (See Figure 13)

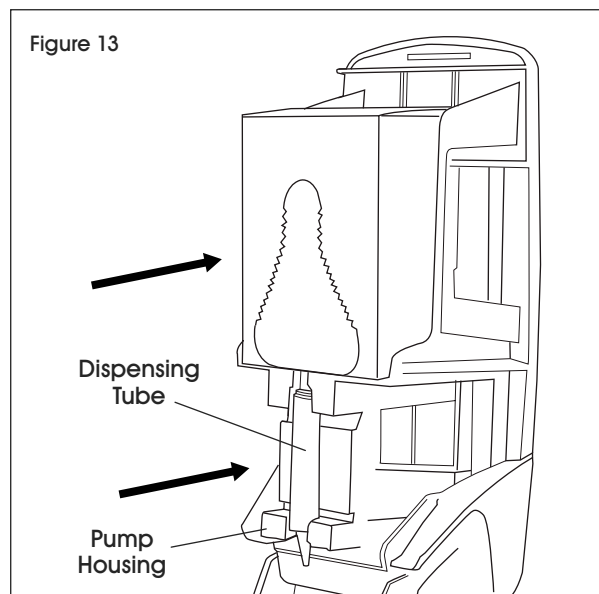

5. Close the dispenser.

## CLEANING

Clean exterior surfaces of the dispenser using warm water and mild soap.



**NOTE: Do not use abrasive cleaners.**

- Dry with a soft cloth.

**ULINE**

1-800-295-5510  
uline.com