

ULINE


SAFETY RAILING TOE BOARD

1-800-295-5510
uline.com

TOOL NEEDED



Allen Wrench
(included)

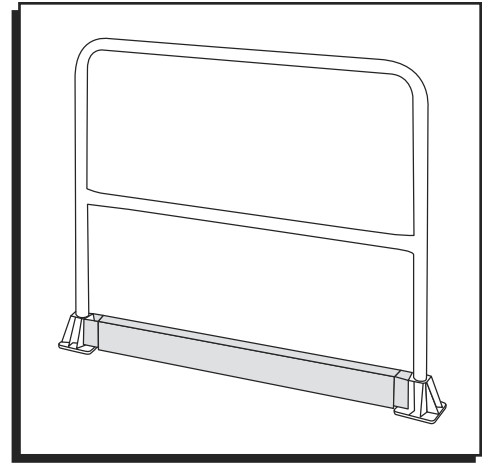


INSTALLATION


1. Place toe board between safety railing mounting sockets. (See Figure 1)



NOTE: Ensure raised side of toe board is on the bottom to create a flush seal with the floor.

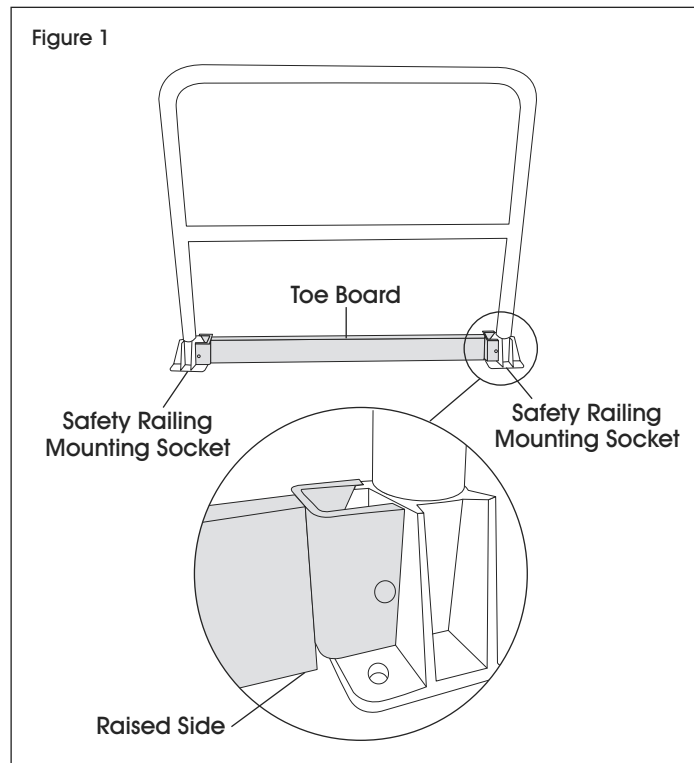

2. Using provided Allen wrench, tighten pre-installed screws to mounting sockets. (See Figure 2)

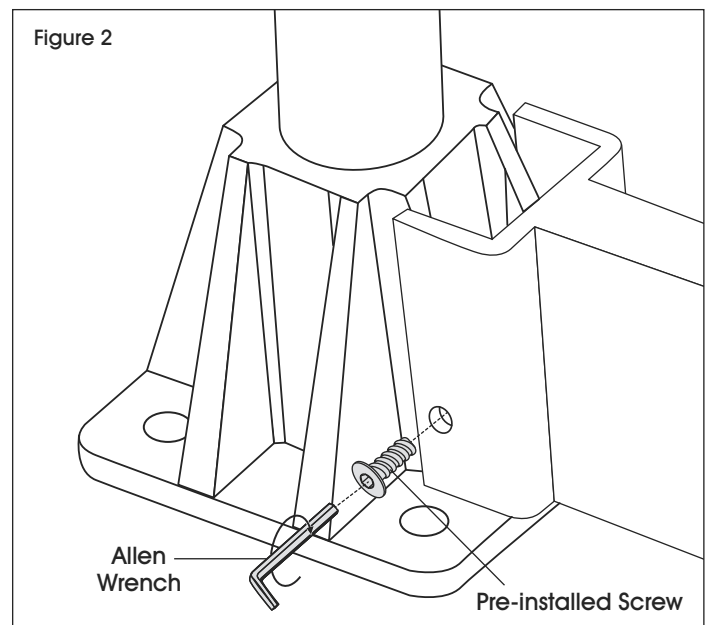


RODAPIÉ PARA BARANDALES DE SEGURIDAD

800-295-5510
uline.mx

HERRAMIENTA NECESARIA



Llave Allen
(incluida)

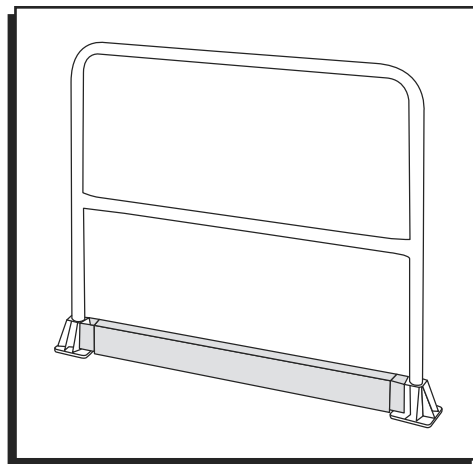



INSTALACIÓN


1. Coloque el rodapié entre los conectores de instalación para barandal de seguridad. (Vea Diagrama 1)



NOTA: Asegúrese de que el lado elevado quede en la parte inferior para crear un sello a ras con el piso.

2. Usando la llave Allen proporcionada, apriete los tornillos preinstalados a los conectores de instalación. (Vea Diagrama 2)

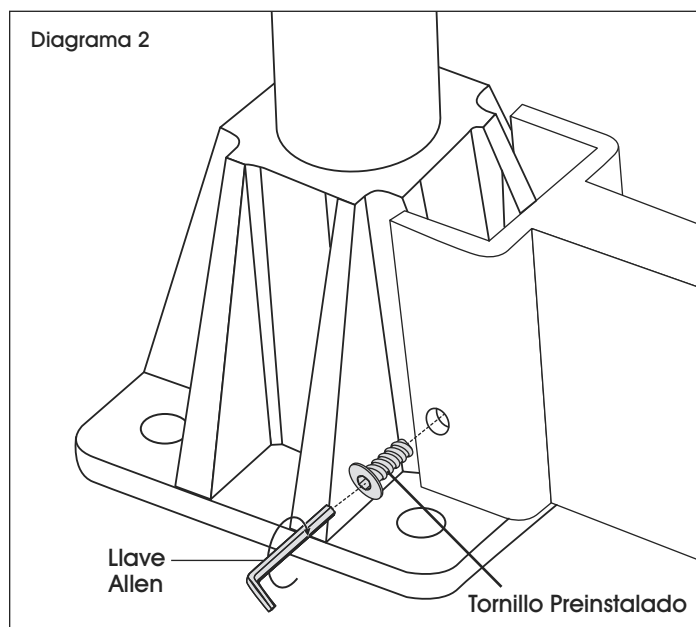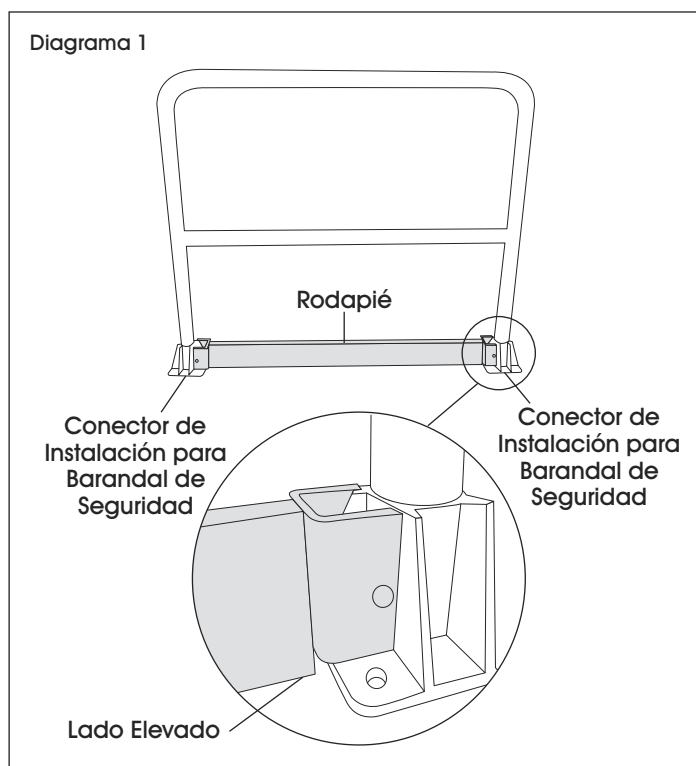

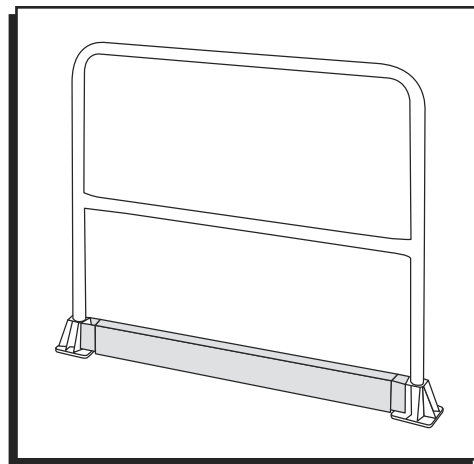OUTIL REQUISClé Allen
(Incluse)**INSTALLATION**

1. Placez le garde-pieds entre les socles de montage du garde-corps. (Voir Figure 1)



REMARQUE : Assurez-vous que le côté saillant du garde-pieds est en bas pour créer un joint affleurant le sol.

2. À l'aide de la clé Allen fournie, serrez les vis préinstallées sur les socles de montage. (Voir Figure 2)

