



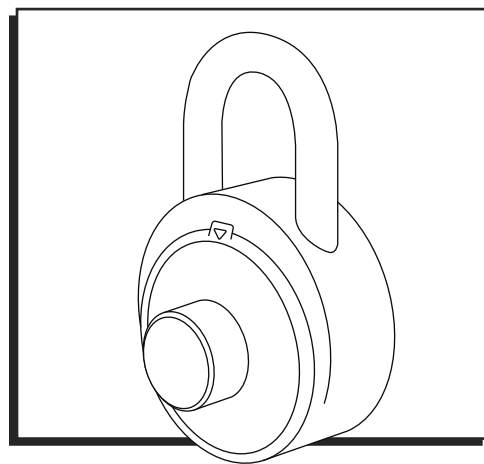


## INSTRUCTIONS

 **NOTE:** Example combination: 26-16-22

1. Turn the dial three full times clockwise (right) to clear the lock, then stop when first combination number (26) aligns with the indicator. (See Figure 1)

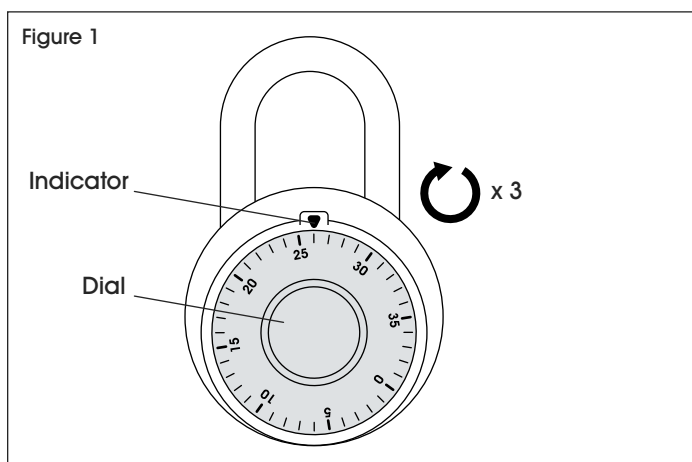

2. Turn the dial one full turn counterclockwise (left), passing the first number (26), and stopping when the second number (16) aligns with the indicator. (See Figure 2)

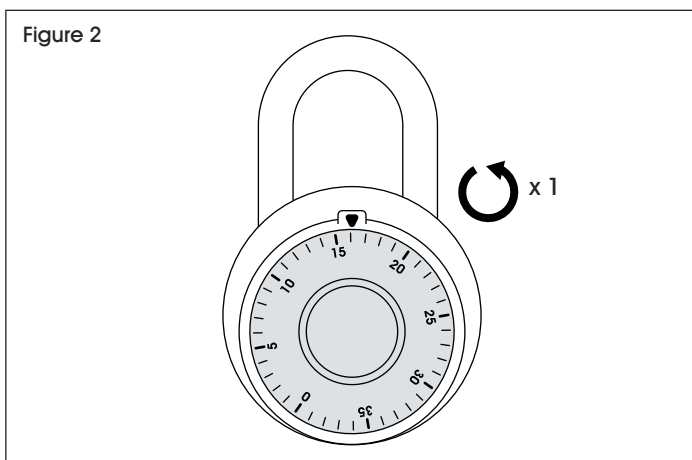

3. Turn the dial clockwise (right) and stop when third number (22) aligns with the indicator. Padlock is now unlocked. (See Figure 3)

