
ULINE H-7086, H-7087
H-8269, H-8270

PORTABLE SAFETY BARRIER

1-800-295-5510
uline.com

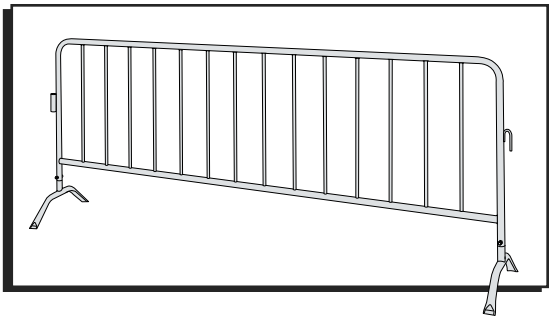

TOOL NEEDED




17 mm Wrench

SAFETY


WARNING! Barrier does not anchor to the ground and can fall over if pushed or leaned against. Do not use as a guard rail.

- **Do not modify barrier in any way.**


PARTS

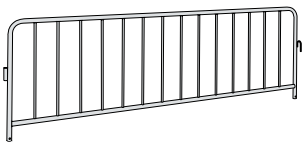


Barrier Frame x 1

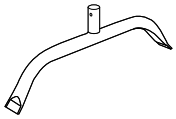

Bridge Foot x 2
(for H-7086 and H-7087)

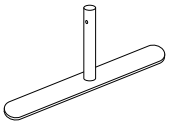

Flat Foot x 2
(for H-8269 and H-8270)

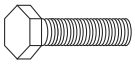

Bolt x 2



Nut x 2

ASSEMBLY

1. Place foot on a flat surface. Align barrier frame and lower onto foot. (See Figures 1-2)

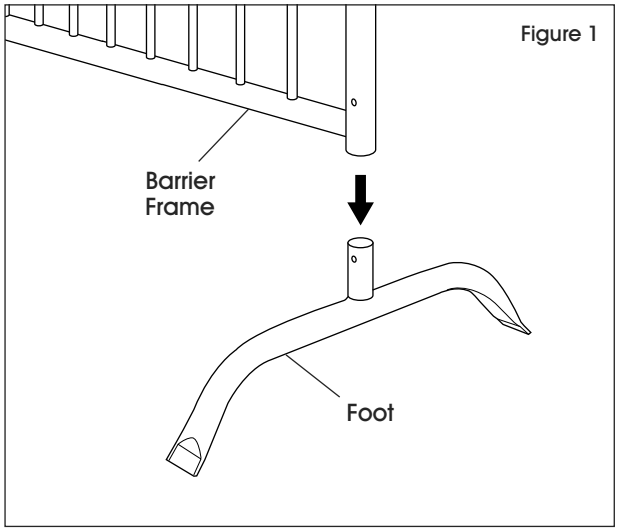


Figure 1


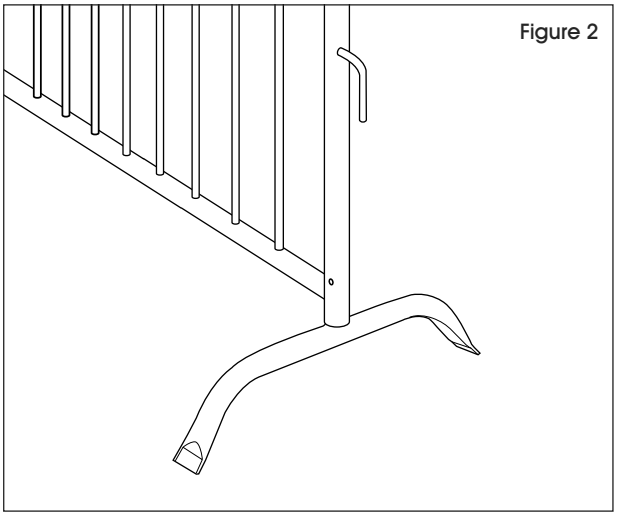


Figure 2

2. Align holes in barrier frame with holes in foot. Insert bolt through holes and hand-tighten nut. Repeat on other side of barrier. (See Figure 3)

Figure 3

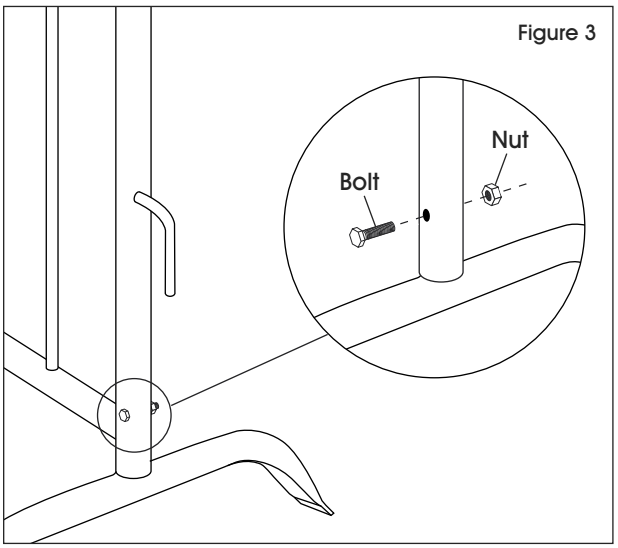

3. Use wrench to fully tighten nuts.