


ULINE S-21636


TRAFFIC CONE TOPPER BARRIER BELT

1-800-295-5510
uline.com

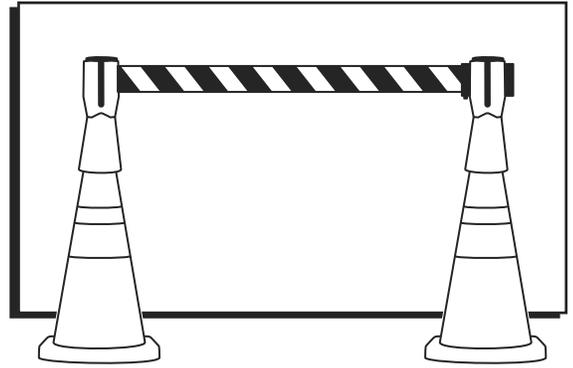


SET-UP


1. Fit Traffic Cone Topper Barrier Belt (A) onto 36" Heavy Duty Traffic Cone (B), Uline Model #S-21635. (See Figure 1)

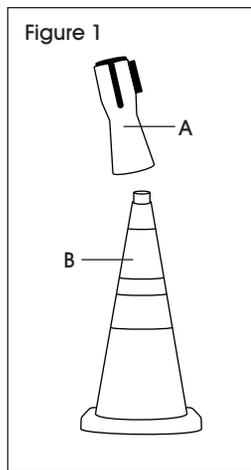

2. Extend the belt to the length required.
3. Clip the belt onto the next Traffic Cone Topper Barrier Belt. (See Figure 2)

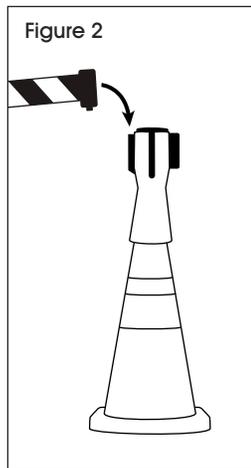


4. Twist knob to lock into place. (See Figures 3-4)

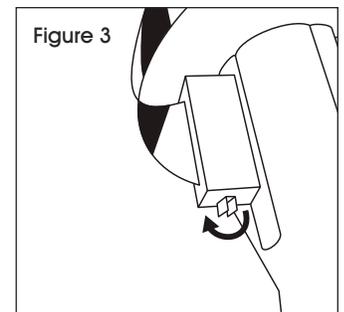

ULINE S-21636

CINTA RETRÁCTIL PARA CONOS DE TRÁFICO


800-295-5510
uline.mx

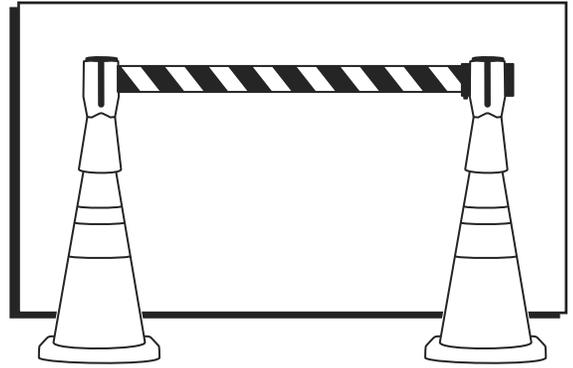

CONFIGURACIÓN


1. Coloque la Cinta Retráctil para Conos de Tráfico (A) al Cono de Tráfico de Uso Pesado de 36" (B), Modelo Uline #S-21635. (Vea Diagrama 1)

Diagrama 1

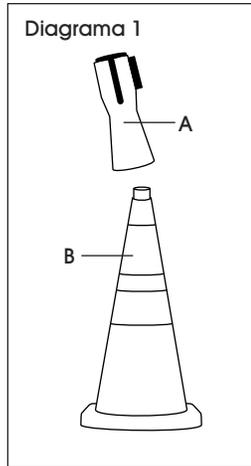

2. Extienda la cinta al largo requerido.
3. Enganche la cinta a la siguiente Cinta Retráctil para Conos de Tráfico. (Vea Diagrama 2)

Diagrama 2

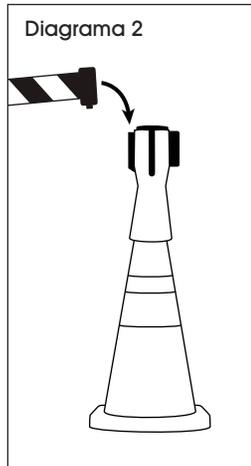

4. Gire la perilla para asegurarla en su lugar. (Vea Diagramas 3-4)

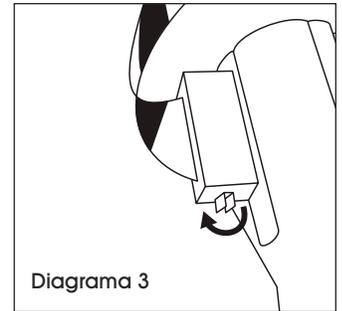


Diagrama 3

Diagrama 4




ULINE S-21636

ENROULEUR À SANGLE POUR CÔNE DE CIRCULATION


1-800-295-5510

uline.ca

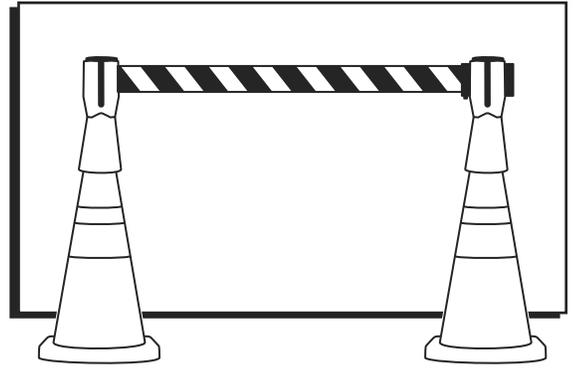


INSTALLATION

1. Insérez l'enrouleur à sangle pour cône de circulation (A) dans le cône de circulation robuste (B), n° de modèle Uline S-21635 (Voir Figure 1)

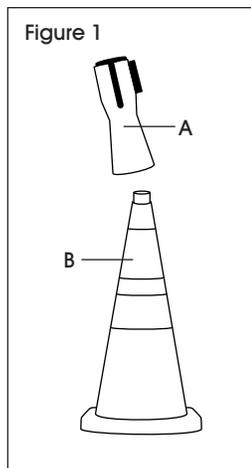

2. Étendez la sangle à la longueur appropriée.
3. Encliquez la sangle dans l'autre enrouleur à sangle pour cône de circulation. (Voir Figure 2)

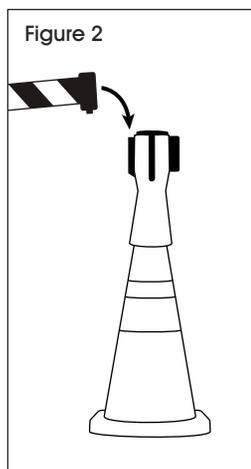

4. Tournez le bouton pour le verrouiller en place. (Voir Figures 3 et 4)

