

ULINE H-7683
KIMBERLY CLARK® SCOTT®
AUTO FOAMING SOAP DISPENSER

1-800-295-5510
uline.com


TOOLS NEEDED




Drill




1/4" Drill Bit



Phillips
Screwdriver

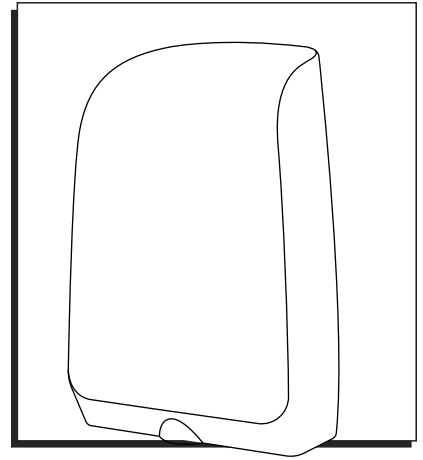


PARTS



#10 x 1" Anchor x 4



#10 x 1" Screw x 4

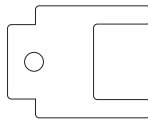

Key x 1



Lock Cover x 1




Push Button x 1

INSTALLATION

OPENING DISPENSER

Insert key into holes on top of dispenser. Pull dispenser cover toward you to open. (See Figure 1)

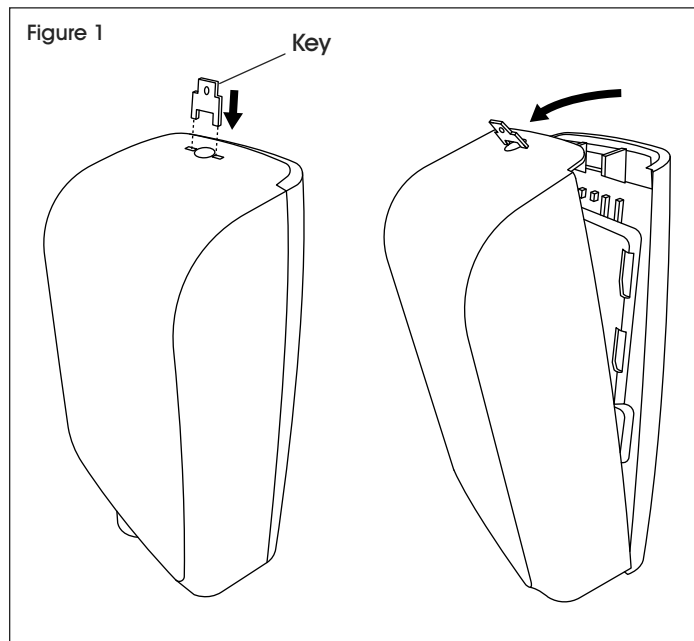


DISPENSER LOCKING

Dispenser comes with lock cover installed for dispenser opening with key. Push button option is mounted on inside of back plate.


PUSH BUTTON INSTALLATION (OPTIONAL)

1. Open the dispenser.
2. Press metal tab down and remove lock cover from inside top of dispenser. (See Figure 2)

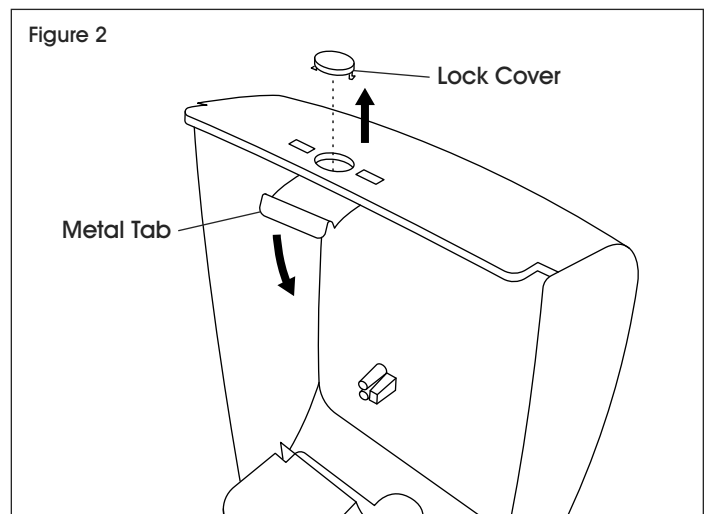


INSTALLATION CONTINUED

3. Store lock cover on inside of back plate. Remove push button from inside of back plate. (See Figure 3)

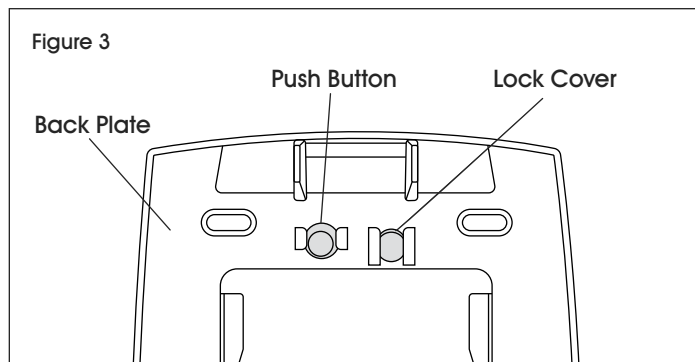

4. Insert push button from top of dispenser. Button will snap into place. (See Figure 4)

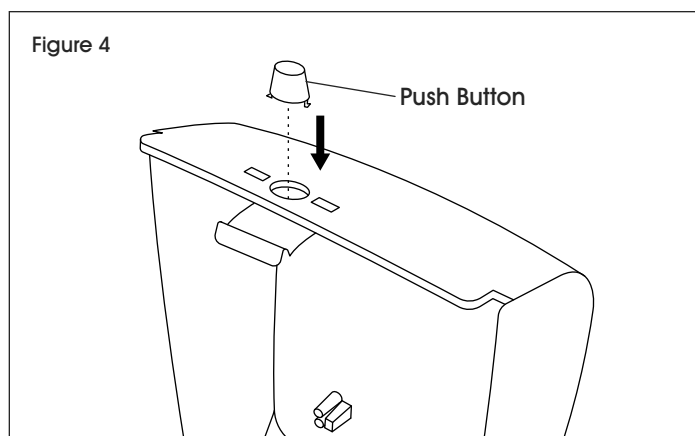


5. Dispenser can now be opened without use of key.
6. To switch to key-only opening, repeat steps 1-4 with lock cover.

HARDWARE INSTALLATION


1. Use the dispenser back plate as a template. Mark wall at preferred locations and drill four holes using 1/4" drill bit. (See Figure 5)



IMPORTANT! Install dispenser at least 7" above counter top.

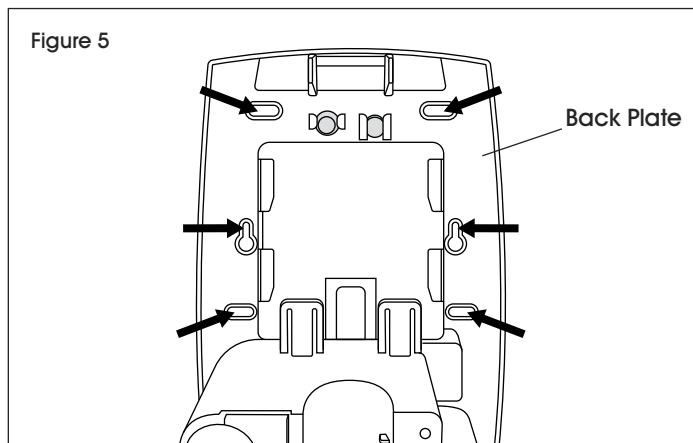


2. Install #10 x 1" anchors into the previously drilled holes. (See Figure 6)

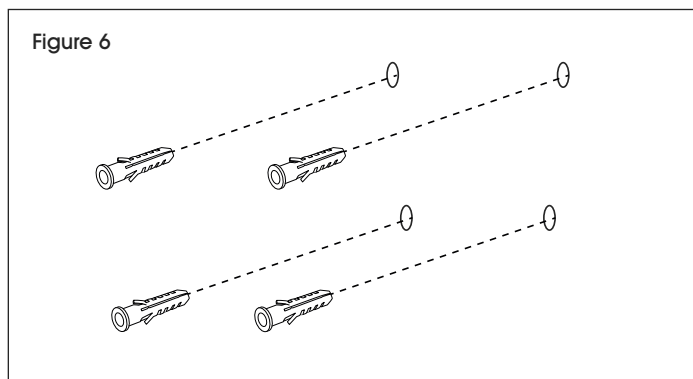

3. Place dispenser over holes on wall. Hand-tighten screws with Phillips screwdriver to secure. (See Figure 7)




NOTE: Do not overtighten screws.

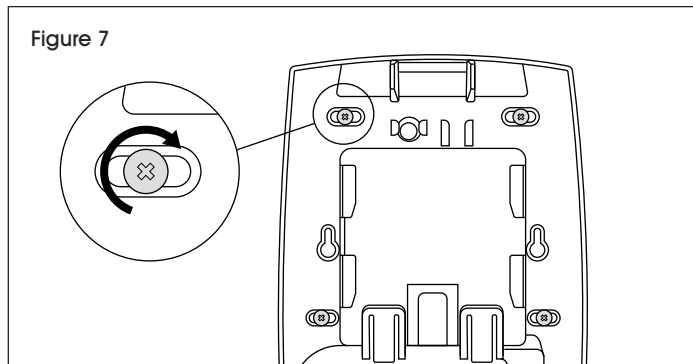


REFILL INSTALLATION

1. Open dispenser.
2. Remove cap from refill. (See Figure 8)

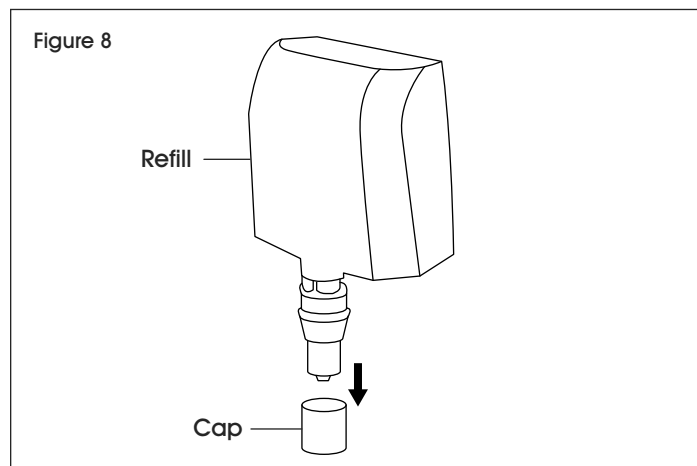


3. Insert refill into dispenser. (See Figure 9)

 **NOTE:** Ensure refill is fully seated in dispenser.

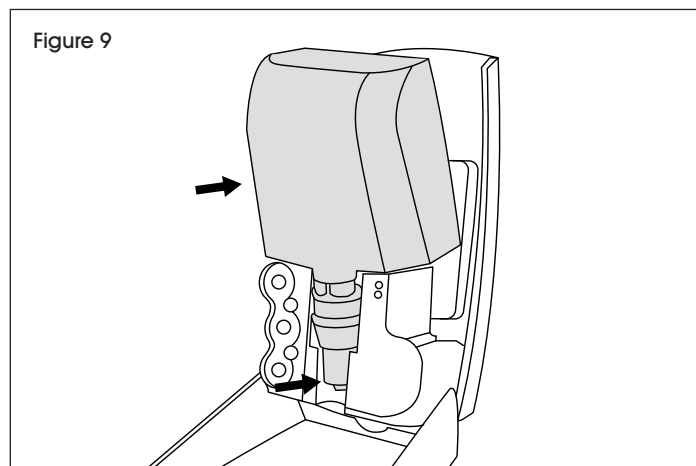

BATTERY INSTALLATION


1. Open dispenser.
2. Push tabs and lift battery cover to remove. (See Figure 10)

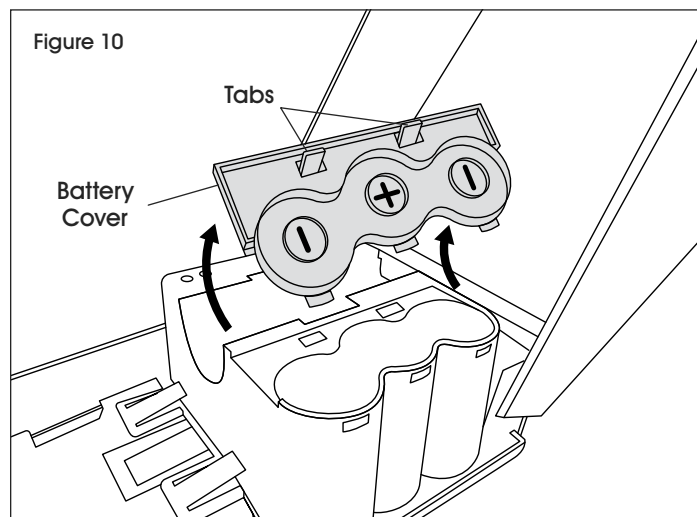

3. Insert batteries (included) according to orientation shown on cover. (See Figure 11)

 **NOTE:** Do not mix old and new batteries.

4. Replace battery cover.

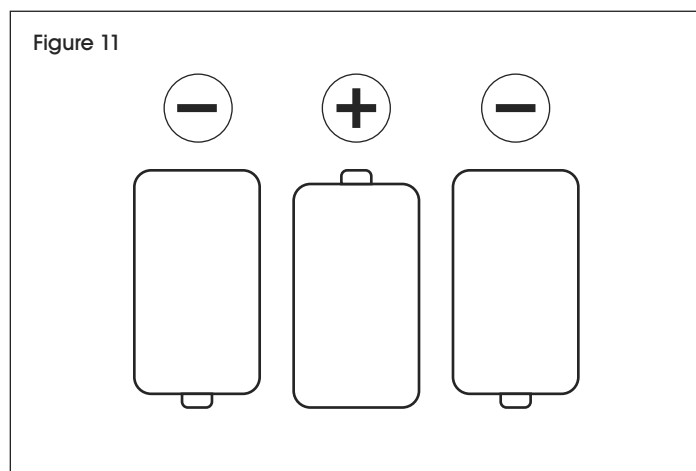


OPERATION

INDICATOR LIGHTS

Battery Light: Shows battery percentage remaining.

Refill Light: Shows refill amount remaining.

Figure 12

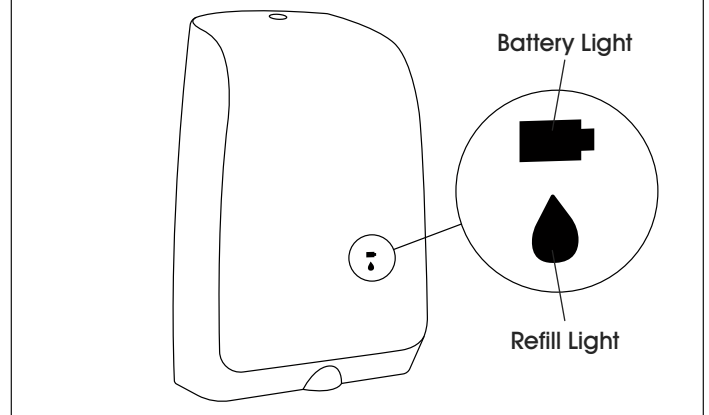

ULINE

1-800-295-5510
uline.com