



1-800-295-5510 uline.com

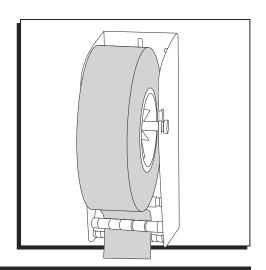


## **PARTS**

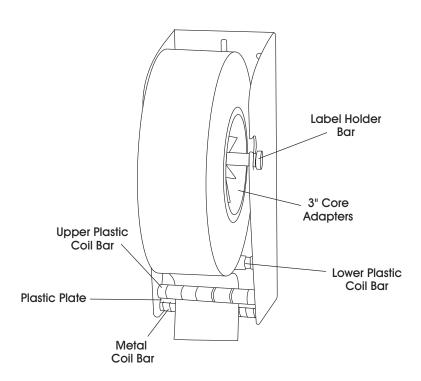

## **SETUP**

#### SECURING THE DISPENSER

1. For wall mounting, screw to the wall through screw holes in the back of the dispenser.



NOTE: Mounting hardware is not included.

2. For tabletop use, remove the yellow plastic feet and secure to table with the provided suction cups.

### LOADING LABEL ROLLS


- Remove label holder bar.
- 2. For rolls of labels with 1" cores, load directly onto the label holder bar. For rolls of labels with 3" cores, put a core adapter on both sides of the label core, then load onto the label holder bar.

PAGE 1 OF 2 0425 IH-4689

# THREADING LABELS




IMPORTANT! Labels should unwind over the top of the roll of labels, toward the front of the dispenser. (See Figure 1)

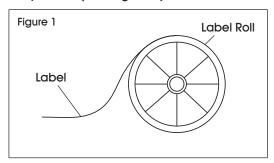

1. Remove the first four to five labels from the roll.

- Thread the liner under the lower plastic coil bar and upper plastic coil bar going over the top of the plastic plate. (See Figure 2)
- 3. Thread the liner back down in between the metal coil bar and plastic plate. (See Figure 2)
- 4. When pulling the liner forward, the labels will dispense by the upper plastic coil bar. (See Figure 2)

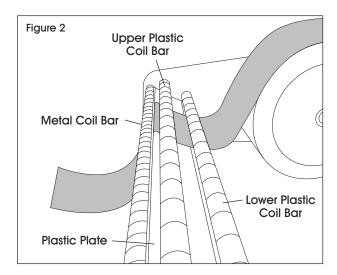

PAGE 2 OF 2 0425 IH-4689