


ULINE H-5066

**GOJO® LTX™ FOAM SOAP
TOUCHLESS DISPENSER**

1-800-295-5510
uline.com

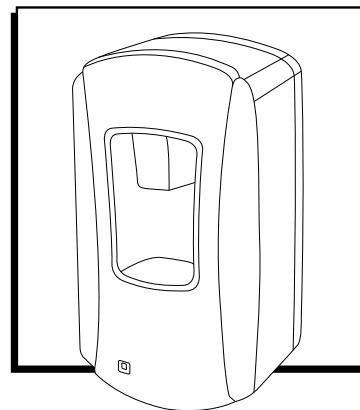

TROUBLESHOOTING

OPERATING ISSUES	POSSIBLE CAUSES	RECOMMENDATIONS
Not dispensing/indicator light not working.	Batteries may be dead, low or installed incorrectly.	Clean sensor with damp cloth to remove any debris. Check alignment of refill cartridge. Verify e-key is present and undamaged (colored knob protruding from black pump collar). <ul style="list-style-type: none">• Removing the e-key will prevent unit from dispensing.