


# ULINE H-12562


## DANBY® COMPACT REFRIGERATOR

1.7 CU. FT.


1-800-295-5510  
uline.com

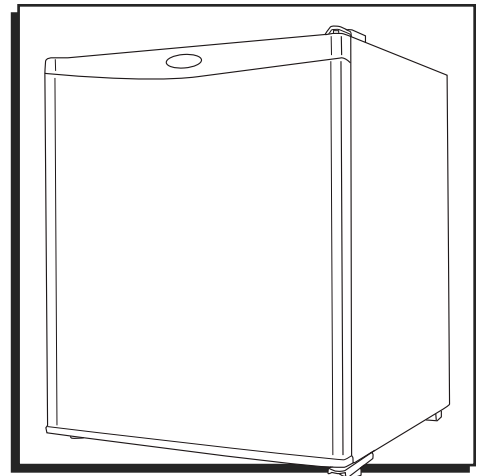

### TOOLS NEEDED



Phillips  
Screwdriver



Flathead  
Screwdriver



Two Person Assembly  
Required

## SAFETY

Read, save and follow all safety instructions.



**DANGER!** Risk of fire or explosion. Flammable refrigerant used. Do not puncture refrigerant tubing.

- Do not use mechanical devices to defrost refrigerator.
- Ensure that servicing is done by factory authorized service personnel to minimize product damage or safety issues.
- If the power supply cord is damaged, it must be replaced by the manufacturer, its service agent or similar qualified person to avoid hazard.
- Consult repair manual or owner's guide before attempting to service this product. All safety precautions must be followed.
- Dispose of properly in accordance with federal or local regulations.
- Follow handling instructions carefully.
- Do not store explosive substances, such as aerosol cans with a flammable propellant, in this appliance.



**WARNING!** Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.



**WARNING!** Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.



**WARNING!** Do not damage the refrigerant circuit.



**WARNING!** Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.



**CAUTION!** Children should be supervised to ensure that they do not play with the appliance.



**DANGER!** Risk of child entrapment. Before throwing away an old appliance:

- Remove the door or lid.
- Leave shelves in place so that children may not easily climb inside.



**DANGER!** Do not add a lock to the door or lid. This can cause child entrapment and harm.

- This appliance is not intended for use by persons (including children) whose physical, sensory or mental capabilities may be different or reduced, or who lack experience or knowledge, unless such persons receive supervision or training to operate the appliance by a person responsible for their safety.

This appliance is intended to be used in household and similar applications such as:

- Staff kitchen areas in shops, offices and other working environments.
- Farmhouses, bed and breakfasts, hotels, motels and other residential type environments.
- Catering and similar non-retail applications.

## SAFETY CONTINUED

### GROUNDING

- This appliance must be grounded. Grounding reduces the risk of electrical shock by providing an escape wire for the electrical current.
- This appliance has a cord that has a grounding wire with a three-prong plug. The power cord must be plugged into an outlet that is properly grounded. If the outlet is a two-prong wall outlet, it must be replaced with a properly grounded three-prong wall outlet. The serial rating plate indicates the voltage and frequency the appliance is designed for.



**WARNING!** Improper use of the grounding plug can result in a risk of electric shock. Consult a qualified electrician or service agent if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded.

- Do not connect appliance to extension cords or together with another appliance in the same wall outlet. Do not splice the power cord. Do not under any circumstances cut or remove the third grounding prong from the power cord. Do not use extension cords or ungrounded (two-prong) adapters.
- If the power supply cord is damaged, it must be replaced by the manufacturer, its service agent or similar qualified person to avoid hazard.

### INSTALLATION



**NOTE:** Moving the appliance requires at least two people.

### LOCATION

- Place the appliance on a floor that is strong enough to support it when it is fully loaded.
- Do not place the appliance in direct sunlight or near sources of heat, such as a stove or heater, as this can increase electrical consumption. Extreme cold ambient temperatures may also cause the appliance to perform improperly.
- Do not use the appliance near water, like in a wet basement or near a sink.
- This appliance is intended for indoor use only. It is not designed for outside installation, including anywhere that is not temperature controlled (garages, porches, vehicles, etc.).

### SETUP


- Remove interior and exterior packaging prior to installation. Wipe the outside of the appliance with a soft, dry cloth and the inside with a lukewarm wet cloth.
- Before connecting the appliance to a power source, let it stand upright for approximately six hours. This will reduce the possibility of a malfunction in the cooling system from handling during transportation.
- Allow five inches of space between the back of the appliance and adjacent wall. Allow two inches of space between the sides and top of the appliance and adjacent walls.

- This appliance is intended for free-standing installation only and is not intended to be built into a cabinet or counter. Building in this appliance can cause it to malfunction.


### LEVELING

There is an adjustable leg on the bottom of the appliance that can be turned up or down to ensure that the appliance is level.


1. Turn the leveling leg counterclockwise as far as it will go, until the top of the foot is touching the bottom of the cabinet. (See Figure 1)

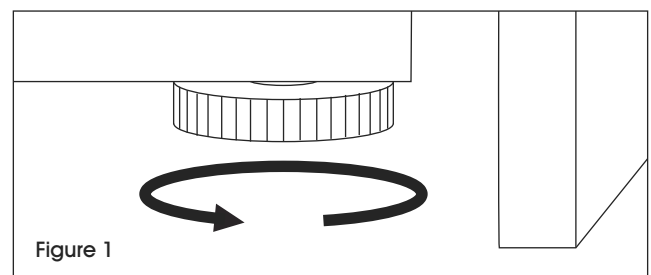


2. Slowly turn the leveling leg clockwise until the appliance is level. (See Figure 2)

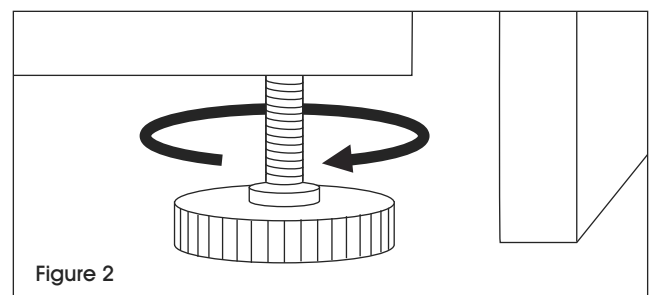

# FEATURES

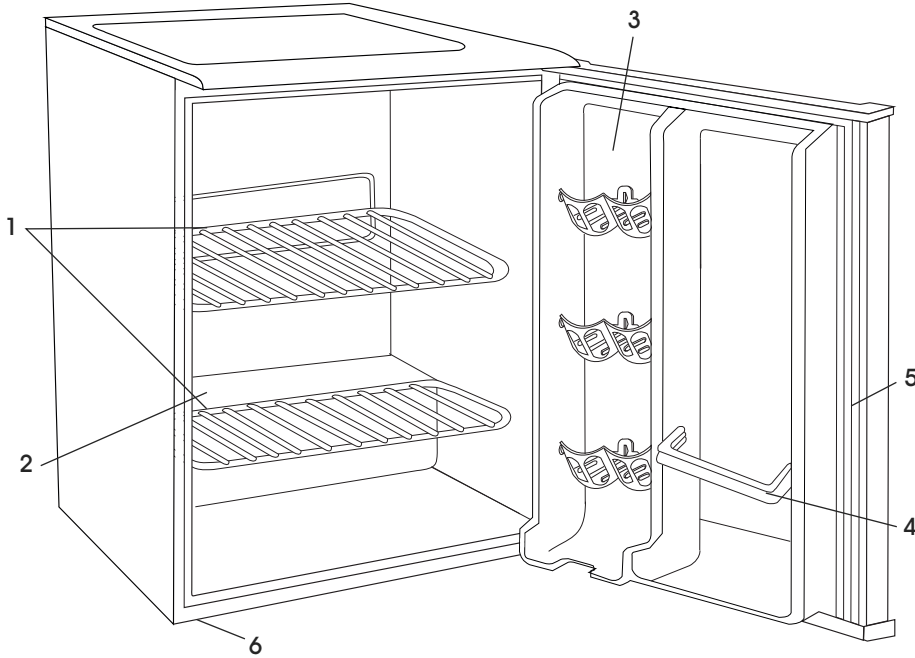

TOP VIEW

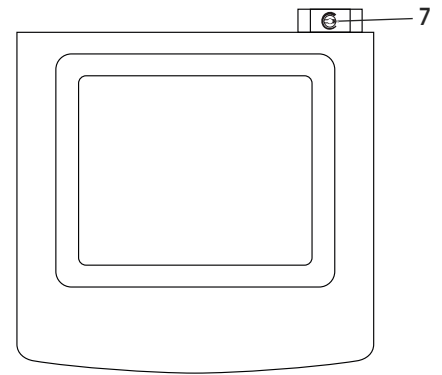

**PARTS**

#	DESCRIPTION
1	Adjustable Shelf
2	Defrost Water Outlet
3	CANSTOR™ Door Liner
4	Bottle Rack
5	Magnetic Gasket
6	Leveling Leg
7	Thermostat Dial

# OPERATION


## TEMPERATURE SELECTION

The temperature of the appliance can be adjusted by turning the thermostat dial on the back of the appliance. (See Figure 3)

- The thicker, darker part of the blue line is the coldest setting.
- The thinner, lighter part of the blue line is the warmest setting.
- The "O" position will turn off the cooling function.



**NOTE:** Internal temperature of the appliance can vary based on ambient temperature, the quantity of items stored and how frequently the door is opened.

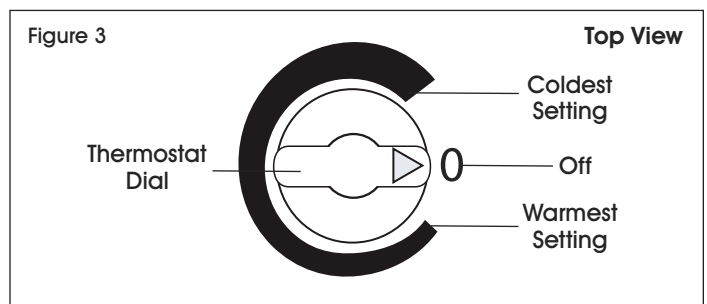


# OPERATION CONTINUED

## DOOR REVERSAL




**IMPORTANT!** If the appliance is placed on its back or side for any length of time during this process, it must be allowed to remain upright for six hours before plugging it in to avoid damage to the internal components.


1. Set fridge upside-down on a non-marring surface.
2. Unscrew the adjustable foot and remove the solid foot from the bottom left side of the cabinet. (See Figure 4)

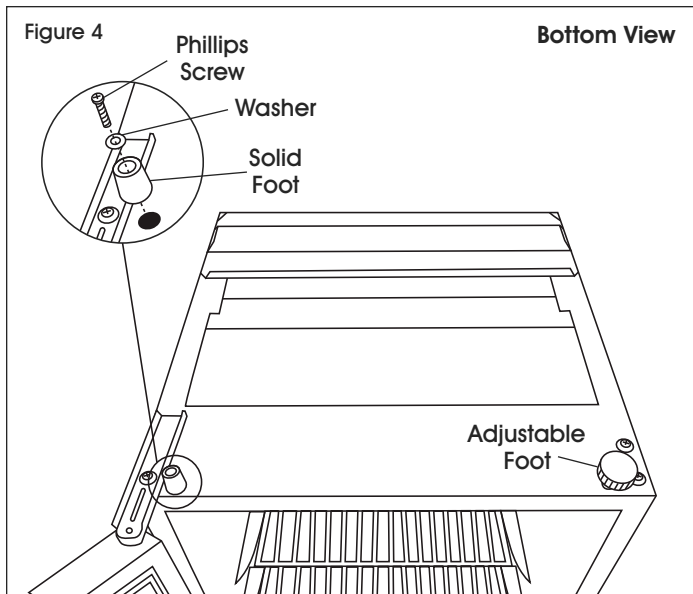


3. Unscrew lower hinge and remove rubber gasket from the bottom right side of the cabinet. (See Figure 5)

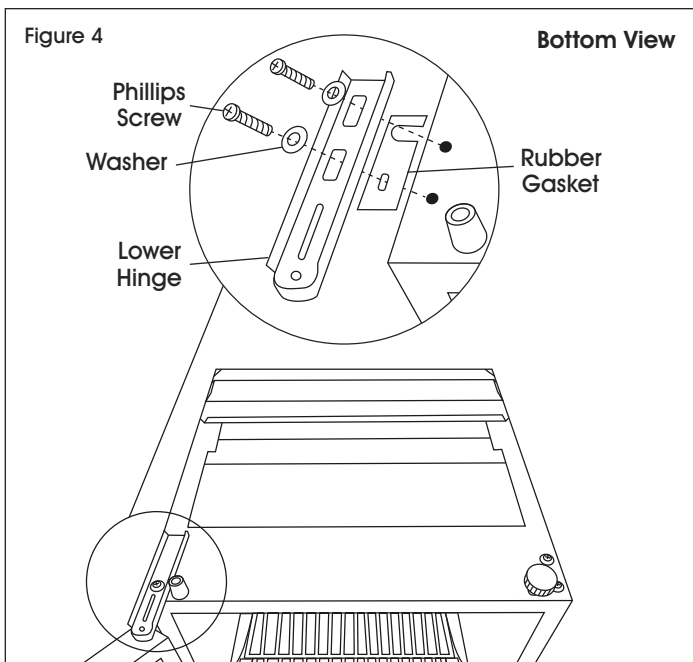


4. Remove the door from the cabinet.
5. Unscrew the upper hinge pin from the right side of the worktop and screw it into the opposite side. (See Figure 6)

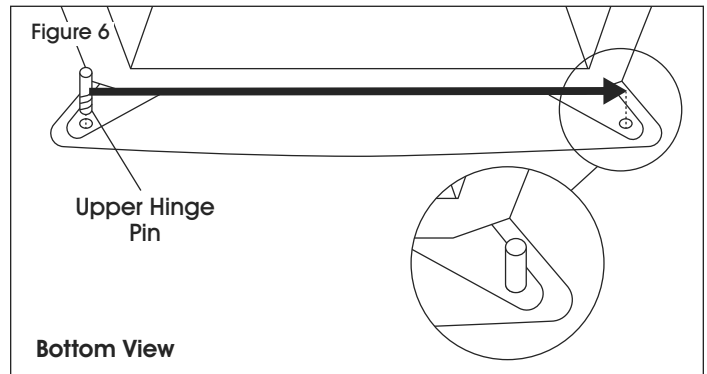

6. Using flathead screwdriver, remove the cap from the top of the door and place it into the opposite side. (See Figure 7)

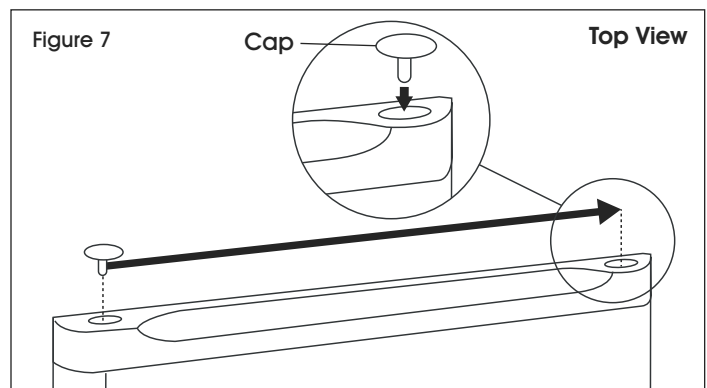


7. Place door on upper hinge pin. (See Figure 8)

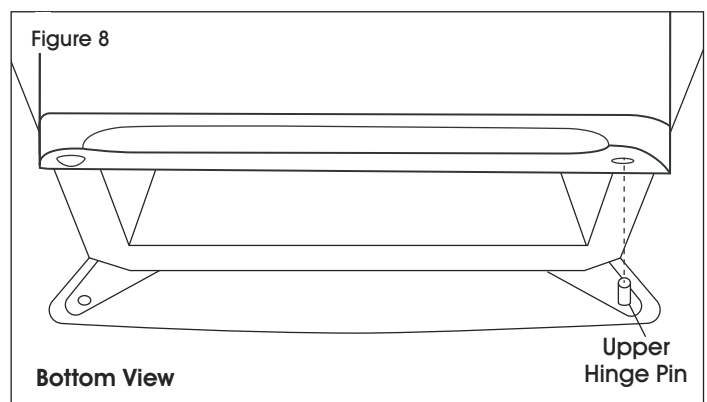


## OPERATION CONTINUED

8. Install the lower hinge and rubber gasket on the bottom left side of the cabinet. (See Figure 9)

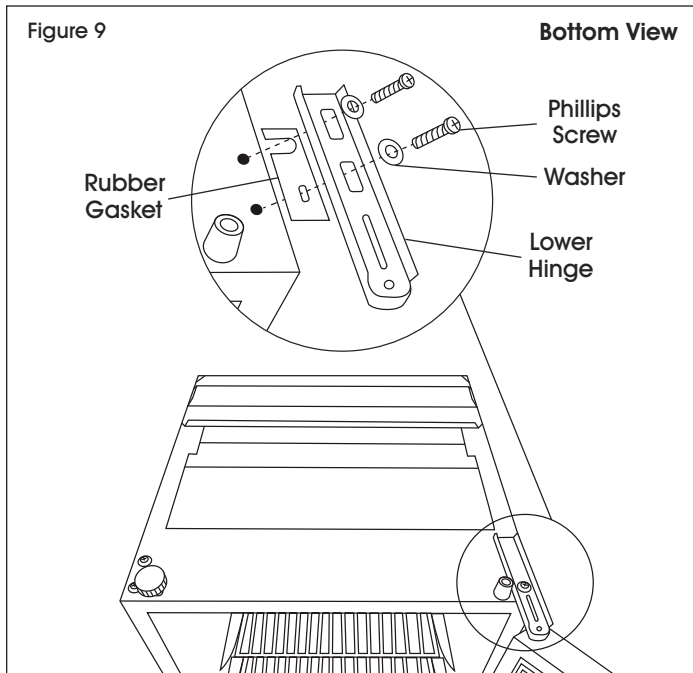

9. Install the solid foot on the bottom right side of the cabinet. Screw adjustable foot into the bottom left side. (See Figure 10)

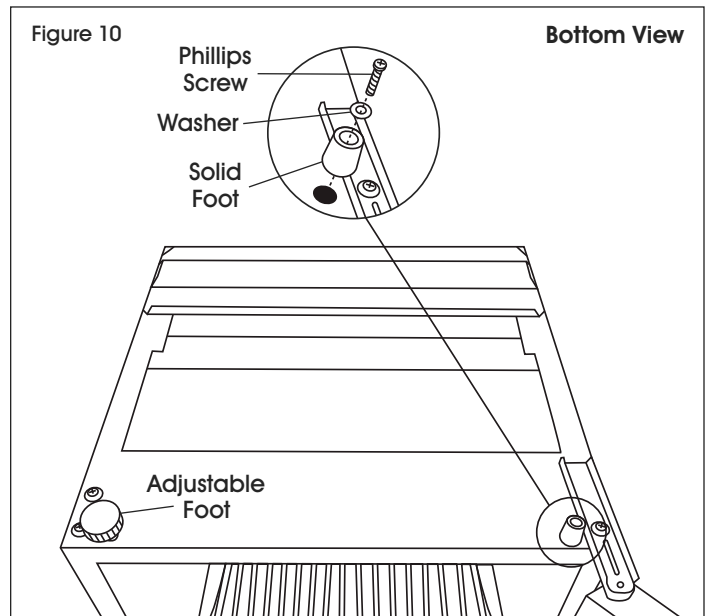

10. Flip fridge right-side up.

## MAINTENANCE

### CLEANING



**IMPORTANT!** Ensure the appliance is unplugged before cleaning.

- To clean the inside of the appliance, use a soft cloth and a solution of one tablespoon of baking soda to one quart of water or a mild soap or detergent solution.
- Wash removable shelves in a mild detergent solution, then dry and wipe with a soft cloth.
- Clean the outside with a soft, damp cloth and some mild detergent.
- Clean the area where the door seals against the cabinet with a soapy cloth. Rinse with a damp cloth and let dry.



**NOTE:** Do not use cleaners containing ammonia or alcohol on the appliance. Ammonia or alcohol can damage the appearance of the appliance. Never use any commercial or abrasive cleaners or sharp objects on any part of the appliance.

### POWER FAILURE

Most power failures are corrected within a few hours and should not affect the temperature of the appliance if you minimize the number of times the door is opened. If the power is going to be off for a longer period, take the proper steps to protect the contents.



**NOTE:** Wait three to five minutes before attempting to restart the refrigerator if operation has been interrupted.

### DEFROST

This appliance is equipped with an automatic defrost function and does not require manual defrosting. Defrost water from the appliance is channeled into a drip tray located above the compressor. Heat transfer from the compressor causes the defrost water to evaporate.

## MAINTENANCE

### VACATION

- **Short vacations:** Leave the appliance operating during vacations of less than three weeks.
- **Long vacations:** If the appliance will not be used for several months, remove all items and turn off the appliance. Clean and dry the interior thoroughly. To prevent odor and mold growth, leave the door open slightly, propping it open if necessary.

### DISPOSAL

This appliance should not be treated as regular household waste. It should be taken to the appropriate waste collection point for recycling of electrical components. For information on local waste collection points, contact your local waste removal agency or government office.

### MOVING

1. Ensure the appliance is empty.
2. Secure the shelves and door with tape.
3. Turn the adjustable leg up to the base to avoid damage.
4. Protect the outside of the appliance with a blanket or similar item.
5. Ensure the appliance stays in the upright position during transportation. If the appliance is placed on its back or side during transportation, upon reaching the destination, allow it to remain upright for six hours before plugging in to avoid damage to internal components.

## TROUBLESHOOTING

OPERATING ISSUE	POSSIBLE CAUSE
No power.	A fuse may be blown or the circuit breaker tripped. Plug not fully inserted into the wall outlet.
Internal temperature not cold enough.	Temperature setting is too warm. Door is not shut properly or is opened excessively. Recently added a large quantity of warm food to the cabinet. Close proximity to heat source or direct sunlight. Ambient temperature or humidity is very high.
Appliance runs continuously.	Temperature setting is too cold. Door is not shut properly or is opened excessively. Recently added a large quantity of warm food to the cabinet. Close proximity to heat source or direct sunlight. Ambient temperature or humidity is very high.

**ULINE**

1-800-295-5510

uline.com